


HANSER

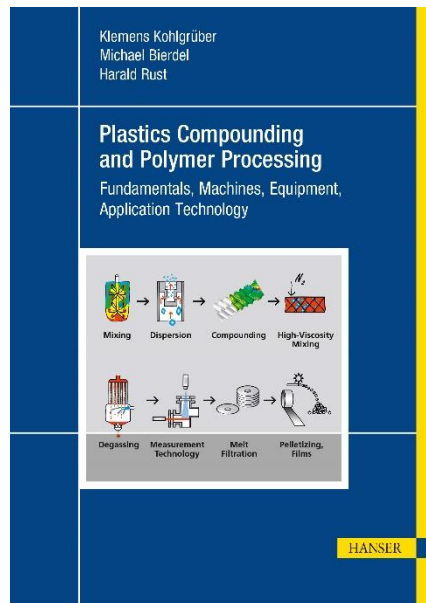

Sample Pages

Plastics Compounding and Polymer Processing

Klemens Kohlgrüber, Michael Bierdel, Harald Rust

ISBN (Book): 978-1-56990-837-2

ISBN (E-Book): 978-1-56990-838-9

For further information and order see

www.hanserpublications.com (in the Americas)

www.hanser-fachbuch.de (outside the Americas)

© Carl Hanser Verlag, München

The Authors

■ The Editors

Klemens Kohlgrüber



Dr. Klemens Kohlgrüber undertook a metalworking apprenticeship and completed further training as a mechanical engineer in Cologne. He studied mechanical engineering in Wuppertal, followed by a diploma and doctorate at RWTH Aachen University. From 1986 to 2015, he worked for Bayer AG, among other things as Head of High Viscosity, Mixing, and Reactor Technology. At the same time, he gave lectures for several years at the University of Dortmund for chemists in the master's program on polymer processing/preparation.

For several years he was head of the High Viscosity Technology working group of the Forschungsgesellschaft Verfahrenstechnik (German Research Association for Process Engineering) and he is a former member of the Association of German Engineers (VDI) advisory board for plastics processing technology. Dr. Kohlgrüber also leads annual VDI seminars on extruders.

Michael Bierdel



Dr.-Ing. Michael Bierdel studied process engineering at the University of Stuttgart and received his doctorate in 2001. Since 2001 he has been working in research and development at Bayer Technology Services GmbH (Bayer AG), now Covestro Deutschland AG (Covestro AG), in the High Viscosity Technology group, which he has led since 2012.

Harald Rust



Dipl.-Ing. Harald Rust (1949–2021) studied mechanical engineering in Bochum, Germany. After working in the planning of hydraulic systems from 1976 to 1983, he was head of development for planetary roller extruders, calenders, calandrettes, and flat film lines at EKK and Battenfeld Extrusionstechnik at the plant in Bochum. From 1983 to 1985 he was the technical manager in a supplier for the aviation industry where he developed air cargo equipment and transport structures for the Ariane 5.

Then, in 1986 ENTEX Rust & Mitschke GmbH was founded. It became the technology leader in the planetary roller extruder, and was granted numerous patents. Until his passing in January 2021, he was the owner and managing director of ENTEX Rust & Mitschke GmbH, with approximately 150 employees.

■ The Coauthors

| Section | Title | Author* |
|---------|--|---|
| 3.1 | Fundamentals of Devolatilization | ■ Dr.-Ing. Heino Thiele, formerly of BASF |
| 3.5 | Degassing of Polymers in Purge Bins | ■ Dr.-Ing. Harald Wilms, Wilms-ITC, Bremen ■ Dipl.-Ing. Hans Schneider, Zeppelin Systems GmbH, Friedrichshafen |
| 4.1 | Compounding Requirements from the Compounder's Perspective | ■ Thomas Schuldt, MOCOM Compounds GmbH & Co. KG, Hamburg |
| 4.2 | Product Development | |
| 4.3 | Additives for Polymers – From Polymer to Plastic | ■ Hermann Diem |
| 5.2 | Tasks and Design of the Processing Zones of a Compounding Extruder | ■ Dr.-Ing. Reiner Rudolf, Covestro Deutschland AG ■ Dr.-Ing. Michael Bierdel, Covestro Deutschland AG |
| 5.3 | Process and Screw Concepts for Machines with High Throughputs | ■ Frank Lechner, Coperion |
| 5.4 | Screw Designs for Highly Filled Polymers (and Dosing Strategies) | ■ Sebastian Fraas, Leistritz Extrusionstechnik GmbH, Nuremberg |
| 5.5 | Compounding of Natural Fiber Reinforced Plastics | ■ Dijan Iliw ■ Dr. Stephen Kroll ■ Prof. Dr.-Ing. Andrea Siebert-Raths ■ HS Hannover |

| Section | Title | Author* |
|---------|--|---|
| 5.6 | Fundamentals of Thermoplastic Foam Extrusion by Means of Parallel Twin-Screw Extruders | <ul style="list-style-type: none"> ▪ Lukas Vogel, Leistritz Extrusionstechnik GmbH, Nürnberg |
| 5.8 | Materials, Coatings, Wear Technology | <ul style="list-style-type: none"> ▪ Dr. Oliver Kayser, Dreistegen GmbH |
| 6.2 | Single-Screw Extruder | <ul style="list-style-type: none"> ▪ Dr. Gregor Karrenberg, Covestro Deutschland AG, Leverkusen |
| 6.3 | The RingExtruder | <ul style="list-style-type: none"> ▪ Dr. Michael Erdmann, Extricom Extrusion GmbH, Lauffen a.N. |
| 6.4 | Counter-Rotating Intermeshing Twin Screws | <ul style="list-style-type: none"> ▪ Dr. Ernst Krüger, Managing Director, GermanTwinScrews GmbH |
| 6.5 | Planetary Roller Extruder | <ul style="list-style-type: none"> ▪ Dipl.-Ing. Harald Rust †, Founder and Managing Director, ENTEX Rust & Mitschke GmbH ▪ Dr. Thomas Birr, Head of Process Engineering, ENTEX Rust & Mitschke GmbH ▪ Holger Lange, Technical Editor, ENTEX Rust & Mitschke GmbH |
| 6.6 | Oscillating Screw Kneader or Continuous Kneader | <ul style="list-style-type: none"> ▪ Dipl.-Ing. Hans-Ulrich Siegenthaler, Kneading Experts GmbH, Suhr, Switzerland |
| 6.7 | Farrel Pomini Continuous Mixers | <ul style="list-style-type: none"> ▪ Peter Gohl ▪ Roman Kebalo ▪ Joe Pereira ▪ Stuart Sardinkas ▪ Farrel Pomini |
| 6.9 | MRS (Multi-Rotations System) | <ul style="list-style-type: none"> ▪ Dr. Axel Hannemann, Gneuss Kunststofftechnik GmbH, Bad Oeynhausen |
| 7.1 | High-Viscosity Reactors | <ul style="list-style-type: none"> ▪ Dr.-Ing. Oliver Seck, Buss-SMS-Canzler GmbH, Branch Office Pratteln, Switzerland |
| 7.2 | Compounding of Polymers by Means of Calender and Flat Film Lines | <ul style="list-style-type: none"> ▪ Dipl.-Ing. Harald Rust †, Founder and Managing Director, ENTEX Rust & Mitschke GmbH ▪ Dr. Stefan Seibel, Brückner Maschinenbau GmbH & Co. KG |
| 7.3.1 | Fundamentals: Homogeneous and Dispersive Mixing | <ul style="list-style-type: none"> ▪ Dr. Jörg Kirchhoff, Arlanxeo Deutschland GmbH, Leverkusen ▪ Dr. Michael Bierdel, Covestro Deutschland AG, Leverkusen |
| 8.1 | Silo Design for Flow and Stability | <ul style="list-style-type: none"> ▪ Dr.-Ing. Harald Wilms, Wilms-ITC, Bremen |
| 8.2 | Blending Silos for Plastic Compounding and Processing | |
| 8.3 | Feeding Technology | <ul style="list-style-type: none"> ▪ Dipl.-Ing. Bernhard Hüppmeier, Brabender Technologie GmbH & Co.KG |
| 8.4 | High-Intensive Mixing | <ul style="list-style-type: none"> ▪ Dr.-Ing. Harald Wilms, Wilms-ITC, Bremen ▪ Dipl.-Ing. Henning Kreis, Zeppelin Systems GmbH, Kassel |
| 8.5 | Pneumatic Conveying in the Polymer Industry | <ul style="list-style-type: none"> ▪ Dr.-Ing. Harald Wilms, Wilms-ITC, Bremen ▪ Dipl.-Ing. Guido Winkhardt, Zeppelin Systems GmbH, Friedrichshafen |

| Section | Title | Author* |
|--|--|---|
| 9 | Gear Pumps for Compounding | <ul style="list-style-type: none"> Dr. Sven Wieczorek, Gesellschaftender Geschäftsführer, Witte Pumps & Technology GmbH |
| 10 | Filters for (Highly) Viscous Polymer Melts | <ul style="list-style-type: none"> Dr. Thomas Grimm-Bosbach, Geschäftsführer, Seebach GmbH, Vellmar |
| 11 | Pelletizing and Drying | <ul style="list-style-type: none"> Dipl.-Ing. Harald Zang Dr. Horst Müller, Maag Automatik GmbH, Großostheim |
| 12 | Measurement Technology | <ul style="list-style-type: none"> Christoph Kugler Johannes Rudloff Christina Hoffmann Thomas Hochrein SKZ – German Plastics Center, Würzburg |
| * Order according to chapter/section number. | | |

Preface

In plastic manufacturing, plastics compounding and polymer processing constitute an important step on the path towards a final product. For the first time, this production step was covered in the German-language edition of this book in 2019. Compared to the German edition, the English edition has been very slightly revised and updated. Section 6.9 on the MRS (Multi-Rotation System) has been newly included. The preface of the German edition translated into English is appended below.

The editors would like to thank all the section authors, especially for their English translations. In particular, we would like to thank Dr. Smith from Carl Hanser Verlag, who supported and managed this English edition extremely well.

Klemens Kohlgrüber, Michael Bierdel, October 2021

■ Preface to the German Edition

For plastic products, there are three successive process stages or “value-adding stages” from the monomer to the material, Figure 1. Extensive literature is available on polymer reactions such as polymerization, polycondensation, and polyaddition in the reaction process stage. This also applies to the final processing stage. Injection molding and extrusion are described in detail in the literature. Universities and seminar providers also offer a wide range of lectures and seminars.

In contrast, the “preparation” polymer processing stage, or more comprehensively polymer processing and plastics compounding, is represented neither in the literature nor in the university landscape – except for its own lecture described below. This “gap” is to be closed by the present book. However, the book is not only aimed at professionals from the polymer and plastics industry, but the content is also relevant to other industries, such as those of food and pharmaceuticals.

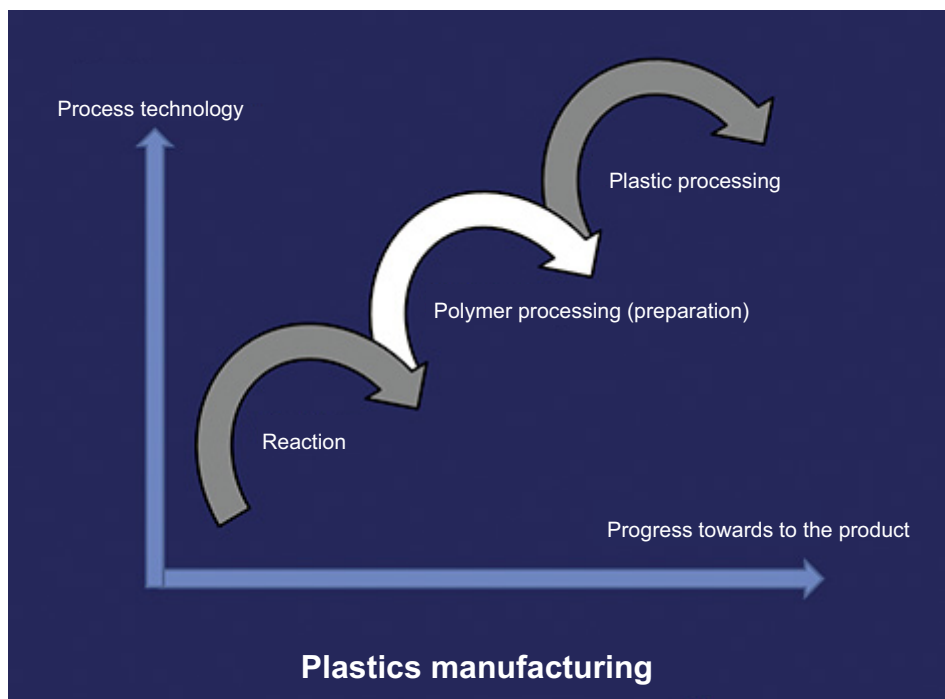


Figure 1 Process steps from monomer to plastic material

For many years, the editor Klemens Kohlgrüber has given lectures on polymer processing (preparation) at the Technical University of Dortmund for students in the master's program. This lecture is now carried out by the editor Michael Bierdel and the established "tradition" of a visit to the company ENTEX in Bochum with the students continues. ENTEX manufactures planetary roller extruders and is a very good example for the students how an innovative company develops and manufactures the planetary roller extruder from "steel to saleable product". Process engineering trials in pilot plants are also visited.

This gave the editors the idea of writing a book on polymer processing and plastics compounding with the associated apparatus and machinery. Due to the lectures of Kohlgrüber and Bierdel and due to the many years of experience of ENTEX founder Harald Rust, a lot of presentation material was available for the basis of the book. On the other hand, there was the wish to enrich the book by contributions of further authors with special expert knowledge. From the point of view of the editors, this was successful and they would like to take this opportunity to thank all authors for their contributions!

We would also like to thank Hanser Verlag and especially Ms. Wittmann, who supported us exceptionally well and had an increased workload due to the large number of authors!

The editor Klemens Kohlgrüber thanks his daughter Kristina for reviewing his own manuscripts!

Mr. Rust thanks his secretary Mrs. Wieczorek for the intensive support of the contributions of ENTEX.

Klemens Kohlgrüber, Michael Bierdel, Harald Rust, July 2019

For an explanation of the individual chapters of this book, see also Section 1.4.

Contents

| | |
|---|-----------|
| The Authors | V |
| In Memoriam | IX |
| Preface | XI |
| PART A Introduction to the Processing of Polymers | 1 |
| 1 Introduction | 3 |
| <i>Klemens Kohlgrüber, Michael Bierdel</i> | |
| 1.1 Plastics and Their Importance | 3 |
| 1.2 Processing and Compounding | 4 |
| 1.3 Recycling of Plastics | 5 |
| 1.4 Guide to the Individual Chapters of this Book | 7 |
| 2 Polymer Processing – Process Technology of Polymer Production | 9 |
| <i>Klemens Kohlgrüber</i> | |
| 2.1 Introduction | 9 |
| 2.2 Polymer Processing during the Polymer Synthesis in the Primary Production | 14 |
| 2.3 Polymer Processing after the Polymer Production – Compounding | 17 |
| 2.3.1 Main Temperature Window when Compounding for Finish Mixture | 18 |
| 2.3.2 Mixing in the Extruder | 19 |
| 2.3.3 Temperature and Time Limits for Compounding | 22 |
| 2.3.4 Challenges when Compounding | 25 |
| 2.3.5 Energy Requirement when Compounding | 28 |
| 2.3.6 Range of Performance of Extruder | 32 |
| 2.3.7 Throughput and Performance Density | 35 |

| | | |
|---------------|---|-----------|
| 2.3.8 | Performance Density in the Melt Area | 39 |
| 2.3.9 | Energy Balance and Product Discharge Temperature | 40 |
| 2.3.10 | Static Mixers | 46 |
| 2.3.11 | Mixing Performance, Mixing Quality, Cross Mixing, Longitudinal Mixing | 49 |
| 2.3.11.1 | Mixing Performance | 49 |
| 2.3.11.2 | Mixing Performance and Mixing Quality | 51 |
| 2.3.11.3 | Cross and Longitudinal Mixing | 53 |
| 2.3.11.4 | Residence Time Distribution | 54 |
| 2.3.11.5 | Mean Residence Time | 58 |
| PART B | Processing in Polymer Production | 61 |
| 3 | Devolatilizing Devices | 63 |
| 3.1 | Fundamentals of Devolatilization | 63 |
| | <i>Heino Thiele</i> | |
| 3.1.1 | Phase Equilibrium | 65 |
| 3.1.2 | Macroscopic Mass and Energy Balance | 68 |
| 3.1.3 | Quantities Influencing the Change in Concentration | 69 |
| 3.1.4 | General Conclusions | 79 |
| 3.2 | Polymer Production and Degassing Tasks | 81 |
| | <i>Klemens Kohlgrüber</i> | |
| 3.2.1 | General Challenges at the Degassing of Volatiles from Polymers | 82 |
| 3.2.2 | Special Features at the Degassing of Polymers with High Content of Volatiles and Limitation of Finish Degassing .. | 83 |
| 3.3 | Overview of Devices and Machines for Compounding with Polymer Degassing | 84 |
| | <i>Klemens Kohlgrüber</i> | |
| 3.3.1 | Introduction | 84 |
| 3.3.2 | Devices with Rotating Components and Machines | 86 |
| 3.4 | Apparatus-Based Polymer Evaporation | 90 |
| | <i>Klemens Kohlgrüber</i> | |
| 3.4.1 | Tube Evaporator | 91 |
| 3.4.2 | Process and Devices for Finish Degassing for Very Low Residual Contents in the Polymer | 98 |
| 3.4.3 | General Scheme of an Apparatus-Based Evaporation Stage | 103 |
| 3.4.4 | Product Quality | 104 |
| 3.5 | Degassing of Polymers in Purge Bins | 108 |
| | <i>Harald Wilms, Hans Schneider</i> | |
| 3.5.1 | Introduction | 108 |

| | | |
|---------|---|-----|
| 3.5.2 | Process Requirements for Degassing of Solids | 109 |
| 3.5.3 | Basics of Particle Degassing | 110 |
| 3.5.4 | Determination of Degassing Process Parameters | 112 |
| 3.5.4.1 | Oven Tests | 114 |
| 3.5.4.2 | Batch Trials | 114 |
| 3.5.4.3 | Pilot Plant Tests | 114 |
| 3.5.4.4 | Criteria for the Gas Flow Rate for Degassing | 116 |
| 3.5.5 | Design Requirements for the Degassing Silo | 116 |
| 3.5.6 | Heating of Bulk Solids | 119 |
| 3.5.7 | Energy-Efficient Plant Concepts | 120 |
| 3.5.8 | Comparable Applications | 121 |
| 3.5.9 | Summary | 121 |

PART C Processing after Polymer Production – Compounding ... 123

4 Requirements, Product Development, Additives, Sources of Faults 125

| | | |
|---------|---|-----|
| 4.1 | Compounding Requirements from the Compounder's Perspective | 125 |
| | <i>Thomas Schuldt</i> | |
| 4.1.1 | Introduction | 125 |
| 4.1.2 | Economics | 125 |
| 4.1.3 | Technical Requirements along the Process Chain | 127 |
| 4.1.3.1 | Material Handling | 127 |
| 4.1.3.2 | Raw Material Pre-Treatment | 129 |
| 4.1.3.3 | Premixing | 129 |
| 4.1.3.4 | Extruder and Wear | 131 |
| 4.1.3.5 | Cooling and Pelletizing | 135 |
| 4.1.3.6 | Packaging | 136 |
| 4.1.4 | Quality Control | 137 |
| 4.1.5 | Environmental Aspects | 139 |
| 4.1.6 | Conclusions | 139 |
| 4.2 | Product Development | 140 |
| | <i>Thomas Schuldt</i> | |
| 4.2.1 | Introduction | 140 |
| 4.2.2 | Types of Product Development | 140 |
| 4.2.3 | Building Blocks of Product Development | 142 |
| 4.2.3.1 | Equipment Technology | 143 |
| 4.2.3.2 | Process Technology | 143 |
| 4.2.3.3 | Formulation | 143 |
| 4.2.4 | Ingredients | 144 |
| 4.2.4.1 | Additives | 144 |

| | | |
|-----------|---|------------|
| 4.2.4.2 | Fillers | 145 |
| 4.2.4.3 | Pigments | 146 |
| 4.2.5 | Innovation | 148 |
| 4.2.6 | Quality Control | 149 |
| 4.2.7 | Scale-up | 150 |
| 4.3 | Additives for Polymers – From Polymer to Plastic | 152 |
| | <i>Hermann Diem</i> | |
| 4.3.1 | Blends | 152 |
| 4.3.1.1 | Definition of Blends | 152 |
| 4.3.1.2 | Classification of Multi-Phase Systems | 153 |
| 4.3.1.2.1 | Polymer Blends | 153 |
| 4.3.1.2.2 | Dry Blends | 155 |
| 4.3.2 | Additives | 155 |
| 4.3.2.1 | Definition of Additives | 155 |
| 4.3.2.2 | Effects and Mode of Operation of the Additives | 156 |
| 4.3.2.2.1 | Plasticizers | 156 |
| 4.3.2.2.2 | Stabilizers | 156 |
| 4.3.2.3 | Incorporation of Additives into Polymers | 158 |
| 4.3.3 | Fillers | 159 |
| 4.3.3.1 | Definition of Fillers | 159 |
| 4.3.3.2 | Classification and Properties of Fillers | 159 |
| 4.3.3.3 | Aspect Ratio | 160 |
| 4.4 | Practical Examples Regarding Sources of Fault/Avoidance of Faults during Compounding | 161 |
| | <i>Klemens Kohlgrüber</i> | |
| 4.4.1 | Black Specks | 163 |
| 4.4.2 | Sources at Dosing and Mixing | 167 |
| 4.4.2.1 | Demixing | 167 |
| 4.4.2.2 | Dosing System | 168 |
| 4.4.2.3 | Mixing of Polymer with Additives | 169 |
| 4.4.3 | Drive-Measurement Technique | 170 |
| 4.4.4 | Faults in Tests with Small Extruders for Scale-up Purposes ... | 172 |
| 5 | Compounding with Co-Rotating Twin-Screw Extruders | 177 |
| 5.1 | Introduction | 177 |
| | <i>Klemens Kohlgrüber</i> | |
| 5.1.1 | Advantages of the Co-Rotating Twin-Screw Extruder | 178 |
| 5.1.2 | Disadvantages of the Co-Rotating Twin-Screw Extruder | 180 |
| 5.1.3 | Range of Services and Power Density of Co-Rotating Twin-Screw Extruders | 181 |

| | | |
|-----------|---|-----|
| 5.1.4 | Parameters in Dependence on the Diameter Ratio D_a/D_i | 183 |
| 5.1.4.1 | Strength and Throughput as a Function of D_a/D_i | 183 |
| 5.1.4.2 | Pressure and Power Characteristic as a Function of D_a/D_i | 186 |
| 5.1.4.3 | Maximum Product Volume | 188 |
| 5.1.4.4 | Inner Surface of the Housing to Maximum Product Space | 189 |
| 5.1.4.5 | Outlook | 192 |
| 5.1.5 | Special Types of Construction of the Co-Rotating Extruder | 192 |
| 5.2 | Tasks and Design of the Processing Zones of a Compounding Extruder <i>Reiner Rudolf, Michael Bierdel</i> | 194 |
| 5.2.1 | Melt Conveying Zone | 195 |
| 5.2.2 | Solids Conveying Zone | 201 |
| 5.2.3 | Plastification Zone | 204 |
| 5.2.4 | Distributive and Dispersive Mixing Zone | 209 |
| 5.2.5 | Devolatilization Zone | 214 |
| 5.2.6 | Pressure Build-up Zone | 216 |
| 5.2.7 | Complete Screw Configuration | 219 |
| 5.2.8 | Specific Energy Input | 222 |
| 5.2.9 | Residence Time Characteristics | 225 |
| 5.3 | Process and Screw Concepts for Machines with High Throughputs <i>Frank Lechner</i> | 229 |
| 5.3.1 | Development to High Torques, Volumes, and Rotations | 229 |
| 5.3.2 | Parameters and Process Limits of Co-Rotating Twin-Screw Kneaders | 230 |
| 5.3.3 | Process Length and Screw Development | 233 |
| 5.3.4 | Maximum Possible Screw Speed | 234 |
| 5.3.5 | Torque-Limited Processes | 235 |
| 5.3.6 | Volume-Limited Processes | 237 |
| 5.3.7 | Quality-Limited Processes | 241 |
| 5.3.8 | Process Concept for Economical Compounding | 244 |
| 5.3.9 | Outlook | 247 |
| 5.4 | Screw Designs for Highly Filled Polymers (and Dosing Strategies) <i>Sebastian Fraas</i> | 247 |
| 5.4.1 | Why Filler Compounds? | 247 |
| 5.4.2 | Typical Applications | 248 |
| 5.4.3 | Material-Specific Influencing Factors | 248 |
| 5.4.3.1 | Influence of Filler | 248 |
| 5.4.3.1.1 | Origin/Mining | 250 |
| 5.4.3.1.2 | Particle Size and Particle Size Distribution | 250 |

| | | | |
|-------|-----------|---|-----|
| | 5.4.3.1.3 | Coating | 250 |
| | 5.4.3.1.4 | Moisture Content | 251 |
| | 5.4.3.2 | Polymer and Additives | 252 |
| 5.4.4 | | Process Technology | 252 |
| | 5.4.4.1 | Conveying Technology | 254 |
| | 5.4.4.2 | Dosing Equipment | 255 |
| | 5.4.4.3 | Downstream Equipment | 256 |
| | 5.4.4.4 | Barrel Setup of an Extruder for Highly Filled Compounds | 256 |
| | 5.4.4.5 | Screw Design | 260 |
| | 5.4.4.5.1 | Melting Zone | 260 |
| | 5.4.4.5.2 | Filler Addition and Wetting | 261 |
| | 5.4.4.5.3 | Dispersion Zone | 261 |
| | 5.4.4.5.4 | Vacuum and Discharge Zone | 262 |
| | 5.4.4.6 | Entire System | 262 |
| 5.5 | | Compounding of Natural Fiber Reinforced Plastics | 263 |
| | | <i>Dijan Iliew, Stephen Kroll, Andrea Siebert-Raths</i> | |
| | 5.5.1 | Pre-Knowledge for the Processing of Natural Fibers | 265 |
| | 5.5.2 | Design and Parameterization of the Process Unit of a Co-Rotating Twin-Screw Extruder | 271 |
| 5.6 | | Fundamentals of Thermoplastic Foam Extrusion by Means of Parallel Twin-Screw Extruders | 279 |
| | | <i>Lukas Vogel</i> | |
| | 5.6.1 | Definition and Characterization of Foams | 281 |
| | 5.6.2 | Process Steps for Foam Extrusion | 283 |
| | 5.6.2.1 | Provision of Thermoplastic Melts | 284 |
| | 5.6.2.2 | Addition and Admixing of the Propellant (Blowing Agent) | 284 |
| | 5.6.2.3 | Injecting the Blowing Agent and Conditioning of the Melt | 285 |
| | 5.6.2.4 | Discharge of the Melt through the Die | 287 |
| | 5.6.2.5 | Growth of Cells and Stabilization of the Foam Structure | 289 |
| | 5.6.3 | System Components for Foam Extrusion | 293 |
| 5.7 | | Screw Configurations | 298 |
| | | <i>Michael Bierdel</i> | |
| 5.8 | | Materials, Coatings, Wear Technology | 313 |
| | | <i>Oliver Kayser</i> | |
| | 5.8.1 | Requirements to the Components for Compounding | 313 |
| | 5.8.2 | Materials and Heat Treatment | 314 |
| | 5.8.2.1 | Tempering Steels and Nitriding Steels | 315 |

| | | |
|----------|---|------------|
| 5.8.2.2 | Hot-Work Steels | 315 |
| 5.8.2.3 | Alloyed Cold-Work Steels | 316 |
| 5.8.2.4 | High-Speed Steels | 317 |
| 5.8.3 | Execution of Components of Twin-Screw Extruders | 317 |
| 5.8.4 | Process of Surface Layer Hardening | 319 |
| 5.8.4.1 | Wear Protection by Nitriding | 320 |
| 5.8.4.2 | Avoidance of Adhesive Wear due to Nitriding | 323 |
| 5.8.4.3 | Avoidance of Pitting Corrosion by Nitriding | 324 |
| 5.8.4.4 | Special Process for Maintaining Corrosion Protection. | 324 |
| 5.8.5 | Wear Protection by Coatings | 326 |
| 5.8.5.1 | Hard Chromium | 326 |
| 5.8.5.2 | Chemical Nickel | 328 |
| 5.8.5.3 | Thin Layers of Hard Material | 329 |
| | 5.8.5.3.1 Physical Vapor Deposition | 329 |
| | 5.8.5.3.2 Chemical Vapor Deposition | 333 |
| 5.8.6 | Recommendations for Application | 336 |
| 5.8.7 | Summary and Outlook | 337 |
| 6 | Compounding and Polymer Processing with Different Extruder Types | 341 |
| 6.1 | Extruder Types – Introduction | 341 |
| | <i>Klemens Kohlgrüber</i> | |
| 6.1.1 | Compounding and Processing with Different Extruder Types | 341 |
| 6.1.2 | Single-Screw Extruders | 344 |
| 6.1.3 | Gear Pumps | 345 |
| 6.1.4 | Co-Rotating Twin-Screw Extruders | 346 |
| 6.1.5 | Counter-Rotating Twin-Screw Extruders | 347 |
| 6.1.6 | Multi-Screw Extruders: Ring Extruders and Planetary Roller Extruders | 348 |
| 6.1.7 | Non-Screw Extruders | 349 |
| 6.1.8 | High-Viscosity Reactors | 350 |
| 6.2 | Single-Screw Extruder | 351 |
| | <i>Gregor Karrenberg</i> | |
| 6.2.1 | Applications in Compounding | 351 |
| 6.2.2 | Design and Function | 353 |
| 6.2.3 | Plasticizing Extruder | 356 |
| 6.2.4 | Melt Extruder | 361 |
| 6.2.5 | Degassing Extruder | 362 |
| 6.2.6 | Mixing Elements for Single-Screw Extruders | 364 |
| 6.2.7 | Scale-up Methods | 367 |

| | | |
|--------|---|-----|
| 6.3 | The RingExtruder | 369 |
| | <i>Michael Erdmann</i> | |
| 6.3.1 | Mechanical Setup | 370 |
| 6.3.2 | Principle of Movement and Distributive Mixing | 373 |
| 6.3.3 | Dispersive Mixing | 374 |
| 6.3.4 | Degassing Efficiency | 375 |
| 6.3.5 | Heat Transfer – Surface/Volume Ratio | 376 |
| 6.3.6 | Wear Protection | 377 |
| 6.3.7 | Extruder Series and Scale-up | 378 |
| 6.3.8 | Fields of Application | 379 |
| | 6.3.8.1 PET Recycling | 380 |
| | 6.3.8.2 Continuous Production of Rubber Compounds | 381 |
| 6.4 | Counter-Rotating Intermeshing Twin Screws | 387 |
| | <i>Ernst Krüger</i> | |
| 6.4.1 | Understanding of Gelation of PVC as a Requirement for Understanding of Twin Screws | 388 |
| 6.4.2 | Structure of a PVC Grain | 389 |
| 6.4.3 | Scheme of PVC Processing | 390 |
| 6.4.4 | Model of PVC Compounding and Processing | 390 |
| 6.4.5 | Level of Gelation and Mechanical Properties | 391 |
| 6.4.6 | Formulation Components | 392 |
| 6.4.7 | Homogeneity of the Gelation Level | 392 |
| 6.4.8 | Homogeneity in PVC Processing | 393 |
| 6.4.9 | Influence of Temperature on Gelation Homogeneity | 394 |
| 6.4.10 | Temperature inside the 8to0 Adapter | 394 |
| 6.4.11 | Basics of Screw Design | 395 |
| | 6.4.11.1 Zones of a Counter-Rotating Twin Screw | 396 |
| | 6.4.11.2 Special Features of the Screw Design of Counter-Rotating Twin Screws | 398 |
| 6.4.12 | Design and Wear | 399 |
| 6.5 | Planetary Roller Extruder | 404 |
| | <i>Harald Rust, Thomas Birr, Holger Lange</i> | |
| 6.5.1 | Introduction | 404 |
| 6.5.2 | Mechanical Principle | 405 |
| 6.5.3 | Construction | 406 |
| 6.5.4 | Characteristics | 407 |
| 6.5.5 | Construction Sizes and Designations | 408 |
| 6.5.6 | Conveying and Working Principle | 410 |
| | 6.5.6.1 Partially and Fully Filled Areas | 411 |
| 6.5.7 | Planetary Spindle Configuration | 412 |
| | 6.5.7.1 Types of Planetary Spindles | 413 |

| | | |
|---------|---|-----|
| 6.5.7.2 | Planetary Spindle Lengths | 416 |
| 6.5.7.3 | Distribution of Planetary Spindles | 418 |
| 6.5.8 | Intermediate Rings | 419 |
| 6.5.9 | The Modular System | 422 |
| 6.5.10 | Feeding of Solids | 423 |
| 6.5.11 | Feeding of Liquids | 427 |
| 6.5.12 | Degassing | 429 |
| 6.5.13 | Sensor System | 438 |
| 6.5.14 | Peripheral Devices | 440 |
| 6.6 | Oscillating Screw Kneader or Continuous Kneader | 442 |
| | <i>Hans-Ulrich Siegenthaler</i> | |
| 6.6.1 | Introduction | 442 |
| 6.6.2 | Historical Background | 443 |
| 6.6.3 | Working Principle | 444 |
| 6.6.4 | Shear Rate | 446 |
| 6.6.5 | Residence Time and Residence Time Distribution | 448 |
| 6.6.6 | Technical Design | 450 |
| 6.6.6.1 | Modularity | 450 |
| 6.6.6.2 | Liners | 452 |
| 6.6.6.3 | Screw Elements | 454 |
| 6.6.6.4 | Kneading Bolts and Teeth | 456 |
| 6.6.6.5 | Temperature Control | 458 |
| 6.6.6.6 | Pressure Build-up Systems | 461 |
| 6.6.7 | Application Fields | 462 |
| 6.6.7.1 | Cable Compounds | 463 |
| 6.6.7.2 | Engineering and High-Performance Plastics | 464 |
| 6.6.7.3 | PVC Applications (Granulating and Calendering) ... | 465 |
| 6.6.7.4 | Thermoset Applications | 466 |
| 6.6.7.5 | Powder Coatings and Toners | 466 |
| 6.6.7.6 | Anode Masses for Aluminum Production | 467 |
| 6.6.7.7 | Specialties | 467 |
| 6.6.7.8 | Food Applications | 468 |
| 6.7 | Farrel Pomini Continuous Mixers | 470 |
| | <i>Peter Gohl, Roman Kebalo, Joe Pereira, Stuart Sardinskas</i> | |
| 6.7.1 | Introduction | 470 |
| 6.7.2 | General Mechanical Features | 472 |
| 6.7.2.1 | Mechanical Features: Mixer | 472 |
| 6.7.2.2 | Mechanical Features: Extruder | 473 |
| 6.7.3 | FCM Configuration | 473 |
| 6.7.3.1 | Feed Section | 473 |
| 6.7.3.2 | Mixing Section | 473 |

| | | |
|---------|---|-----|
| 6.7.3.3 | Apex Zone | 474 |
| 6.7.3.4 | Rotor Orientation | 475 |
| 6.7.4 | Principles of Operation | 478 |
| 6.7.4.1 | Heating and Cooling | 480 |
| 6.7.4.2 | Mixer Body Segments and Mixing Dams | 481 |
| 6.7.5 | Process Flexibility | 482 |
| 6.7.6 | Applications | 484 |
| 6.7.7 | Energy Saving | 485 |
| 6.7.8 | Conclusion | 487 |
| 6.8 | Extruder Types – Comparison | 488 |
| | <i>Klemens Kohlgrüber, Michael Bierdel</i> | |
| 6.8.1 | Questions to Be Asked Prior to a Comparison | 488 |
| 6.8.2 | Costs, Operating Figures, Specific Energy | 490 |
| 6.8.3 | Characteristic Process Properties of Different Extruder Types | 496 |
| 6.8.4 | Descriptive Evaluation of Extruders with Current Throughputs and Sizes | 500 |
| 6.9 | MRS (Multi-Rotations System) | 510 |
| | <i>Axel Hannemann</i> | |
| 6.9.1 | Mode of Operation | 510 |
| 6.9.1.1 | Feeding and Plastification in the MRS | 510 |
| 6.9.1.2 | The Degassing Drum – The Heart of the MRS Technology | 511 |
| 6.9.1.3 | Conveying and Pumping | 514 |
| 6.9.2 | Continuous Measure and Control of Process Parameters | 514 |
| 6.9.2.1 | Importance of Acquisition and Control of the Process Parameters Melt Pressure, Temperature, and Viscosity | 514 |
| 6.9.2.2 | Control by Means of Online Viscometer VIS | 514 |
| 6.9.3 | Essential Process-Related Influencing Factors during PET Processing | 515 |
| 6.9.3.1 | Drying and Extrusion | 515 |
| 6.9.4 | Processing of Other Polymers | 519 |
| 6.9.4.1 | Recycling of Polyolefins | 519 |
| 6.9.4.2 | Monomer Removal | 521 |
| 6.9.4.3 | Decontamination | 524 |
| 6.9.5 | Energy Savings with the MRS System | 525 |
| 6.9.6 | Results | 526 |

| | | |
|----------|--|------------|
| 7 | Processing of Polymer Melts with Other Devices and Machines | 529 |
| 7.1 | High-Viscosity Reactors | 529 |
| | <i>Oliver Seck</i> | |
| 7.1.1 | Introduction | 529 |
| 7.1.2 | Single-Shaft High-Viscosity Reactors | 532 |
| 7.1.3 | Twin-Shaft High-Viscosity Reactors | 534 |
| | 7.1.3.1 Reacom | 534 |
| | 7.1.3.2 Reasil | 535 |
| 7.1.4 | Product Transport | 536 |
| 7.1.5 | Energy Input | 537 |
| 7.1.6 | Axial and Radial Mixing Behavior | 538 |
| 7.1.7 | Devolatilization | 541 |
| 7.1.8 | Apparatus Design and Scale-up | 544 |
| 7.1.9 | Summary | 546 |
| 7.2 | Compounding of Polymers by Means of Calender and Flat Film Lines | 548 |
| | <i>Harald Rust, Stefan Seibel</i> | |
| 7.2.1 | History | 548 |
| 7.2.2 | Continuous Feeding | 550 |
| 7.2.3 | The Planetary Roller Extruder for Calender Feeding | 550 |
| 7.2.4 | Comparison of Different Compounding Systems | 551 |
| 7.2.5 | Modern Calender Lines | 552 |
| 7.2.6 | Types of Pelletizing | 554 |
| 7.2.7 | Roll Mill and Strainer | 556 |
| 7.2.8 | Roll Mill | 556 |
| 7.2.9 | Strainer | 556 |
| 7.2.10 | Edge Trims | 558 |
| 7.2.11 | Different Calender Types | 559 |
| 7.2.12 | Special Designs | 561 |
| 7.2.13 | Differences between Calenders and Calandrettes | 561 |
| 7.2.14 | The Task of the Calender and Different Calender Rolls | 562 |
| 7.2.15 | The Setup and Mode of Operation of a Calender | 564 |
| 7.2.16 | Possibilities of Correction | 565 |
| 7.2.17 | Temperature Distributions | 566 |
| 7.2.18 | Comparison of the Temperature Distribution in the Edge Areas between a Conventional, Peripherally Bored Roll and a Coiled Roll | 566 |
| 7.2.19 | Static and Thermal Comparison of Calender Rolls in Use Today | 567 |
| 7.2.20 | Speeds and Sizes | 567 |
| 7.2.21 | The Mini Impression Roller | 569 |

| | | |
|------------|---|-----|
| 7.2.22 | Thickness Measuring and Inspection Unit for Contamination . | 570 |
| 7.2.23 | Winder | 571 |
| 7.2.24 | Sheet and Film Production | 572 |
| 7.2.24.1 | Gear Pumps | 572 |
| 7.2.24.2 | Flat Film Dies | 573 |
| 7.2.24.2.1 | Die Construction Always Is a Compromise | 573 |
| 7.2.24.2.2 | Application-Specific Die Equipment | 574 |
| 7.2.24.2.3 | Multi-Layer Extrusion | 574 |
| 7.2.25 | Chill Roll Line | 576 |
| 7.2.26 | Flat Film Line | 577 |
| 7.2.27 | Polishing Rolls | 577 |
| 7.2.28 | Foam Sheets of 20 mm–200 mm | 579 |
| 7.2.29 | Vacuum Nap Film Line According to the Film Casting Principle for Construction Nap Film | 580 |
| 7.2.30 | TPU Film Line for Direct Embossing between Siliconized Fabric | 581 |
| 7.2.31 | Film Stretching Lines | 581 |
| 7.2.32 | Introduction to the Biax Process Using the Example of BOPP .. | 582 |
| 7.2.32.1 | Raw Material Supply and Extrusion | 582 |
| 7.2.32.2 | TDO (Transversal Direction Orienter) | 583 |
| 7.3 | Mixing and Dispersion | 585 |
| 7.3.1 | Fundamentals: Homogeneous and Dispersive Mixing | 585 |
| | <i>Jörg Kirchhoff, Michael Bierdel</i> | |
| 7.3.1.1 | Overview, Principles, and Experiments | 585 |
| 7.3.1.1.1 | Homogeneous Mixing – Mixing in Laminar Flow | 585 |
| 7.3.1.1.2 | Dispersive Mixing | 591 |
| 7.3.1.1.3 | Determining the Mixing Quality | 598 |
| 7.3.1.2 | Three-Dimensional Calculations of Mixing and Residence Time Behavior | 602 |
| 7.3.1.3 | Summary | 608 |
| 7.3.2 | Static Mixers | 609 |
| | <i>Klemens Kohlgrüber</i> | |
| 7.3.2.1 | Introduction, Advantages, and Disadvantages | 609 |
| 7.3.2.2 | Construction Types | 611 |
| 7.3.2.3 | Process Technology | 616 |
| 7.3.2.3.1 | Pressure Loss and Mixer Evaluation | 616 |
| 7.3.2.3.2 | Reduction in Layer Thickness Depending on the Mixing Length – Distributive Mixing | 617 |
| 7.3.2.3.3 | Residence Time Distribution | 618 |
| 7.3.2.3.4 | Power Input and Temperature | 618 |

| | | |
|---------------|---|------------|
| 7.3.2.3.5 | Gas Dispersion | 620 |
| 7.3.2.3.6 | Mixing-in of Additives | 621 |
| 7.3.2.3.7 | Heat Transfer | 621 |
| 7.3.2.3.8 | Scale-up of the Mixing Function | 622 |
| 7.3.2.4 | Static Mixers with Internal Temperature Control ... | 624 |
| 7.3.2.4.1 | SMR Heat Exchanger | 625 |
| 7.3.2.4.2 | Compact Heat Exchanger with Temperature-Controlled X Installations | 625 |
| PART D | Further Important Components of a Processing Facility | 627 |
| 8 | Bulk Material Technology in Polymer Processing | 629 |
| 8.1 | Silo Design for Flow and Stability | 629 |
| | <i>Harald Wilms</i> | |
| 8.1.1 | Silos Discharge Problems | 629 |
| 8.1.1.1 | Arching | 629 |
| 8.1.1.2 | Ratholing | 630 |
| 8.1.1.3 | Erratic Flow | 631 |
| 8.1.1.4 | Flushing | 631 |
| 8.1.1.5 | Segregation | 631 |
| 8.1.1.6 | Level Control | 633 |
| 8.1.1.7 | Residence Distribution | 634 |
| 8.1.2 | Flow Profiles in Silos | 635 |
| 8.1.3 | Shear Tests to Determine the Flow Properties | 637 |
| 8.1.4 | Silo Design for Flow | 641 |
| 8.1.4.1 | Hopper Wall Inclination for Mass Flow | 642 |
| 8.1.4.2 | Outlet Diameter to Avoid Arching in Mass Flow | 645 |
| 8.1.4.3 | Outlet Diameter to Avoid Ratholing in Funnel Flow .. | 649 |
| 8.1.4.4 | Influence of Time Consolidation | 653 |
| 8.1.4.5 | Application of Discharge Devices and Discharge Aids | 654 |
| 8.1.5 | Structural Aspects of Silo Design | 656 |
| 8.1.5.1 | Pressures in Silos | 656 |
| 8.1.5.2 | Pressure Peaks in Silos | 657 |
| 8.1.5.3 | Asymmetric Flow Channels | 658 |
| 8.2 | Blending Silos for Plastic Compounding and Processing | 662 |
| | <i>Harald Wilms</i> | |
| 8.2.1 | Introduction | 662 |
| 8.2.2 | Requirements for Blending Silos | 664 |
| 8.2.3 | Survey on Blending Silo Designs | 666 |
| 8.2.3.1 | Blending Silos with Mechanical Energy Input | 666 |
| 8.2.3.2 | Blending Silos with Pneumatic Energy Input | 667 |

| | | |
|---------|--|-----|
| 8.2.3.3 | Gravity Flow Blending Silos with Internal Blend Hoppers | 669 |
| 8.2.3.4 | Gravity Flow Blending Silos with Blending Pipes ... | 671 |
| 8.2.3.5 | Multi-Chamber Blending Silos | 674 |
| 8.2.4 | Selection Criteria | 675 |
| 8.2.5 | Summary | 677 |
| 8.3 | Feeding Technology | 678 |
| | <i>Bernhard Hüppmeier</i> | |
| 8.3.1 | Basics of Feeding Technology | 679 |
| 8.3.2 | Different Feeding Technologies for Solids | 681 |
| 8.3.3 | Loss-in-Weight Liquid Feeders | 686 |
| 8.3.4 | Loss-in-Weight Feeder | 687 |
| 8.3.5 | Requirements for the Weigh-Feeders | 688 |
| 8.3.6 | Plant Implementation | 689 |
| 8.3.7 | Refill | 691 |
| 8.3.8 | Venting | 693 |
| 8.3.9 | ATEX | 694 |
| 8.3.10 | Accuracy & Consistency (Namur) | 695 |
| 8.3.11 | Cleaning and Product Change | 696 |
| 8.3.12 | Control and Interfaces | 696 |
| 8.3.13 | Future Outlook | 696 |
| 8.3.14 | Summary | 697 |
| 8.4 | High-Intensive Mixing | 697 |
| | <i>Harald Wilms, Henning Kreis</i> | |
| 8.4.1 | Introduction | 697 |
| 8.4.2 | Introduction to Mixing of Solids | 698 |
| 8.4.2.1 | Mixing Task | 698 |
| 8.4.2.2 | Classification of Mixers | 699 |
| 8.4.2.3 | Segregation | 699 |
| 8.4.2.4 | Description of the State of Mixing by Statistical Means | 700 |
| 8.4.3 | Applications for High-Speed Mixers | 702 |
| 8.4.3.1 | PVC Processing | 703 |
| 8.4.3.2 | Production of Wood-Plastic Compounds (WPC) | 704 |
| 8.4.3.3 | Production of Compounds for Powder Injection Molding (PIM) | 704 |
| 8.4.3.4 | Production of Compounds for Bonding Applications | 704 |
| 8.4.4 | Mixers Operating in Batch Mode | 705 |
| 8.4.4.1 | Fluid Mixers | 705 |
| 8.4.4.2 | High-Speed Mixers | 706 |
| 8.4.4.3 | Heating-Cooling Mixer Combination | 708 |
| 8.4.4.4 | Container Mixer | 709 |


| | | |
|----------|---|------------|
| 8.4.5 | Mixers for Continuous Operation | 710 |
| 8.4.6 | Summary and Outlook | 712 |
| 8.5 | Pneumatic Conveying in the Polymer Industry | 714 |
| | <i>Harald Wilms, Guido Winkhardt</i> | |
| 8.5.1 | Introduction | 714 |
| 8.5.2 | Conveying Modes and Flow Characteristic | 715 |
| 8.5.3 | Design of Pneumatic Conveying Systems | 717 |
| 8.5.4 | Design and Operation of Pneumatic Conveying Systems | 720 |
| 8.5.4.1 | Concept and Operation of a Dilute-Phase Conveying System | 721 |
| 8.5.4.2 | Concept and Operation of Dense-Phase Conveying Systems | 721 |
| 8.5.5 | Feeding of Solids into the Conveying Line | 726 |
| 8.5.6 | Summary | 727 |
| 9 | Gear Pumps for Compounding | 731 |
| | <i>Sven Wieczorek</i> | |
| 9.1 | Introduction – Gear Pumps | 731 |
| 9.2 | Mode of Operation of the Gear Pump | 732 |
| 9.3 | Gear Pump for Compounding in the Main Flow | 733 |
| 9.3.1 | Design of the Pump | 734 |
| 9.3.1.1 | Housing and Covers | 735 |
| 9.3.1.2 | Gear Wheels | 736 |
| 9.3.1.3 | Friction Bearing | 738 |
| 9.3.1.4 | Axial Shaft Seal | 740 |
| 9.3.1.5 | Heating | 741 |
| 9.3.2 | Influence of the Pumped Medium | 741 |
| 9.3.2.1 | Viscosity | 741 |
| 9.3.2.2 | Solids | 743 |
| 9.3.3 | Control System | 743 |
| 9.4 | Gear Pump for Additives | 743 |
| 9.4.1 | Design of the Pump | 743 |
| 9.4.1.1 | Housing and Covers | 744 |
| 9.4.1.2 | Gear Wheels | 744 |
| 9.4.1.3 | Friction Bearing | 745 |
| 9.4.1.4 | Axial Shaft Seal | 745 |
| 9.4.1.5 | Heating | 745 |
| 9.4.2 | Influence of the Pumped Medium | 745 |
| 9.4.2.1 | Viscosity | 745 |

| | |
|--|------------|
| 10 Filters for (Highly) Viscous Polymer Melts | 747 |
| <i>Thomas Grimm-Bosbach</i> | |
| 10.1 Basic Principles of Polymer Filtration | 747 |
| 10.1.1 Possible Contamination of Polymer Melts | 748 |
| 10.1.2 Usable Filter Media | 749 |
| 10.1.3 Definition of Polymer Melt Filtration | 753 |
| 10.2 Filtration Systems | 754 |
| 10.2.1 Large-Area Filters | 754 |
| 10.2.1.1 Filter Candles | 755 |
| 10.2.1.2 Filter Discs | 756 |
| 10.2.2 Screen Changers | 760 |
| 10.2.2.1 Piston Screen Changers | 760 |
| 10.2.2.2 Rotary Screen Changers | 763 |
| 10.2.3 Modern Filtration Systems – Economic Considerations | 765 |
| 10.3 Design Procedure for Melt Filters | 767 |
| 10.4 The “Right” Filtration | 777 |
| 11 Pelletizing and Drying | 781 |
| <i>Harald Zang, Horst Müller</i> | |
| 11.1 Overview of Pelletizing Processes | 781 |
| 11.2 Process Engineering Aspects of Pelletizing | 783 |
| 11.3 Process Engineering Aspects of Drying | 786 |
| 11.4 Pelletizing and Drying in the Polymer Production | 787 |
| 11.4.1 Typical Application Requirements | 787 |
| 11.4.2 Underwater Pelletizing Technology for Polyolefins | 788 |
| 11.4.3 Air-Cooled Pelletizing for PVC | 792 |
| 11.4.4 Underwater Strand Pelletizing | 793 |
| 11.4.5 Pellet Drying and Process Water Treatment in the Polymer Production | 794 |
| 11.5 Pelletizing and Drying in Compounding Processes (Filling, Reinforcing, Additivation, Blending) | 796 |
| 11.5.1 Typical Application Requirements | 797 |
| 11.5.2 Underwater Pelletizing and Drying | 798 |
| 11.5.3 Strand Dry Cut (Conventional Strand Pelletizing) | 800 |
| 11.5.4 Automatic Strand Dry Cut | 802 |
| 11.5.5 Special Processes for Special Applications | 803 |
| 11.6 Other Pelletizing and Drying Processes | 804 |
| 11.6.1 Dicers | 804 |
| 11.6.2 Water Ring Pelletizers | 805 |
| 11.6.3 Alternative Pelletizing Processes | 806 |

| | |
|--|------------|
| 12 Measurement Technology | 809 |
| <i>Christoph Kugler, Johannes Rudloff, Christina Hoffmann, Thomas Hochrein</i> | |
| 12.1 Metrological Basics | 809 |
| 12.2 Pressure and Temperature Measurement Technology | 810 |
| 12.2.1 Temperature | 811 |
| 12.2.2 Pressure | 813 |
| 12.3 Rheological Metrology | 815 |
| 12.3.1 Laboratory Rheometers | 815 |
| 12.3.2 Process Rheometers | 817 |
| 12.4 Optical and Spectroscopic Methods | 818 |
| 12.4.1 Color Measurement | 818 |
| 12.4.2 Infrared Spectroscopy | 819 |
| 12.4.3 Microscopy and Image Analysis | 820 |
| 12.4.4 Optical Sorting System | 820 |
| 12.5 Application-Related Tests | 823 |
| 12.6 Filter Pressure Test | 824 |
| 12.7 Special Systems | 827 |
| 12.7.1 Ultrasonic Measurement Technology | 828 |
| 12.7.2 Model-Predictive Control | 828 |
| Index | 831 |

PART A

Introduction to the Processing of Polymers

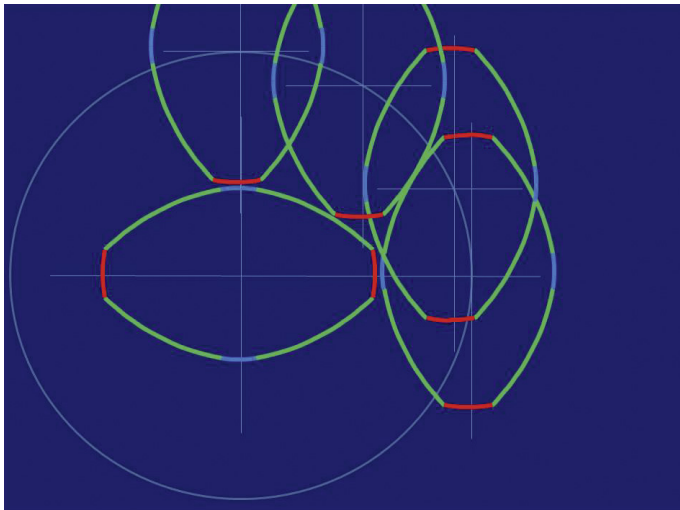

■ 1.1 Plastics and Their Importance

Regarding the five basic human needs [1]:

- food
- health
- clothing
- home
- communication

plastics make considerable and valuable contributions in today's world. This is obvious and will not be further described here.

Compared to other material groups (metal, glass, ceramics, wood, paper), plastic is a very young material. From the mid-1920s onwards, Staudinger laid the ground for understanding polymers (macromolecules). In particular in the IG Farben corporation, development of various polymers followed, for example polyurethane in 1937 by O. Bayer. Polycarbonate was invented at Bayer in 1953. The economic production of polymers was accelerated by K. Ziegler and G. Natta and their catalysts.

Initially, plastics were produced discontinuously. The economic success of plastics is linked to the success of continuous production methods and, especially in the case of thermoplastics, to the success of extruders. The patent for the basic geometry of co-rotating twin-screw extruders was filed in 1944 and granted in 1953 in the Federal Republic of Germany.

■ 1.2 Processing and Compounding

In the past, new plastics were created by new base polymers. Today, a (new) ready-to-use plastic material is only created by the **processing** of a base polymer during and after the polymerization (synthesis) and by **compounding**, i.e. the subsequent incorporation of additional materials such as additives, fillers, fibers, and colorants. Figure 1.1 shows as an example the influences that fillers have on PTFE plastics [2]. Figure 1.2 shows a qualitative estimate of the development of the significance of “Plastics Compounding and Polymer Processing”, our book title. The blue curve describes the number of newly developed base polymers and the green curve shows the volume of plastics produced.

| | Filler | | | | | | |
|-------------------------|----------------------|---------------------|--------------------------|-------------------------|--------------------------------|-----------------------|----------------------|
| Property | Glass (Up to 40%) | Coal (Up to 35%) | Hard Coal (Up to 35%) | Graphite (Up to 15%) | MoS ₂ (Up to 5%) | Bronze (Up to 60%) | Steel (Up to 60%) |
| Wear | ↘ | ↘ | ↘↘ | ↘ | → | ↘↘ | ↘ |
| Abrasion (counterpart) | ↗ | → | → | ↘ | ↘ | → | ↗↗ |
| Chemical resistance | ↘ | ↘ | ↘ | ↘ | ↘ | ↘ | → |
| Heat conductivity | → | ↗ | ↗ | ↗ | → | ↗ | ↗ |
| Gliding properties | → | → | → | ↗ | ↗↗ | → | → |
| Coefficient of friction | ↗ | ↗ | ↗ | ↘ | ↘ | ↗ | ↗ |
| Hardness | ↗ | ↗ | ↗↗ | ↘ | → | ↗ | ↗ |
| Stiffness | ↗ | ↗ | ↗ | → | → | → | → |
| Dry running properties | → | ↗ | ↗ | ↗ | ↗ | → | → |

Trends: blue = neutral, green = positive, red = negative

Figure 1.1 Influence of fillers on the property profile of PTFE plastics [2]. With kind permission of pro-K Industrieverband Halbzeuge und Konsumprodukte aus Kunststoff e.V.

In the broadest sense, compounding means mixing, a process step which occurs frequently in polymer processing and which is one of the main operations. A distinction is made between

- mixing of solids and
- mixing in the melt phase of the polymer (melt compounding)

Mixing of solids is either carried out at room temperature, so-called “cold mixing”, or the components are heated, so-called “hot mixing”, whereby polymer granules or polymer powder remain solid while additives can liquefy.

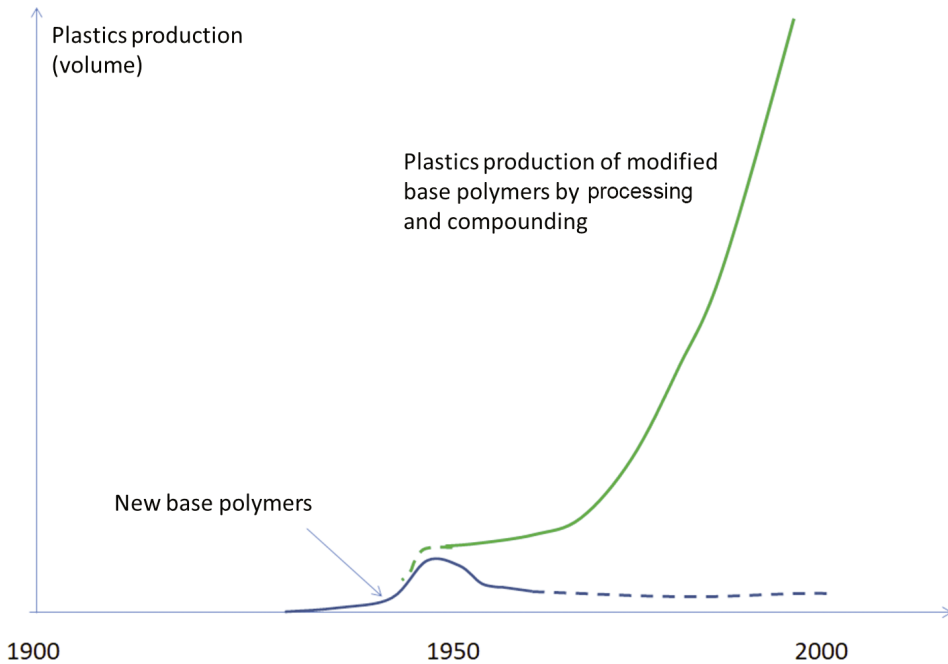


Figure 1.2 Importance of processing and compounding for plastics (estimate)

At the beginning of plastics development and production, “batch processes” were used. An overview of the corresponding batch apparatuses and machines is described in [3] and [4]. Today, especially for the economic production of the most frequently used plastics, thermoplastics, continuous manufacturing processes are used, which are described in this book with the corresponding apparatuses and machines. Melt compounding is normally carried out in extruders and is described in detail in this book.

■ 1.3 Recycling of Plastics

Plastics are indispensable materials. Due to their inadequate disposal, especially in some countries, and long shelf life, more and more plastics accumulate in the environment and plastics are increasingly coming under criticism. In Germany we have a good regulatory policy with regard to waste disposal. Figure 1.3 shows the recycling of plastic “waste” in Germany after its usage:

- 53% of waste is used for energy generation;
- 46% is recycled materially, often resulting in plastics of poorer quality;

- Only 1 % of the waste is converted back into raw materials that can be used again to produce plastics;
- Also only 1 % of plastics is finally deposited in a landfill.

Raw material and material recycling will become more important in the future. In this book, **solvent-based recycling** and **mechanical recycling**, the **re-compounding**, are briefly discussed. EU politics also deals with the topic of plastics recycling and demands: “We need less and better plastics” [7]. A change in production is required “as plastics are becoming the greatest environmental hazard”.

Currently, also the media mostly report critically on the material “plastics”. The advantages of this material over other materials must not be overlooked. Advantages were presented, for example, in the TV programs [8] and [9]. In the ideal case, of course, the aim should be to achieve a plastic that can be recycled and thus reused an infinite number of times. However, energy recovery of plastics that have already been used in applications is better than direct combustion of the crude oil, Figure 1.3.

The developers of processes for polymer preparation (processing) and of machines and apparatus for plastic compounding will have to face these challenges. Only those processes and machines that are most promising both ecologically and economically will prevail.

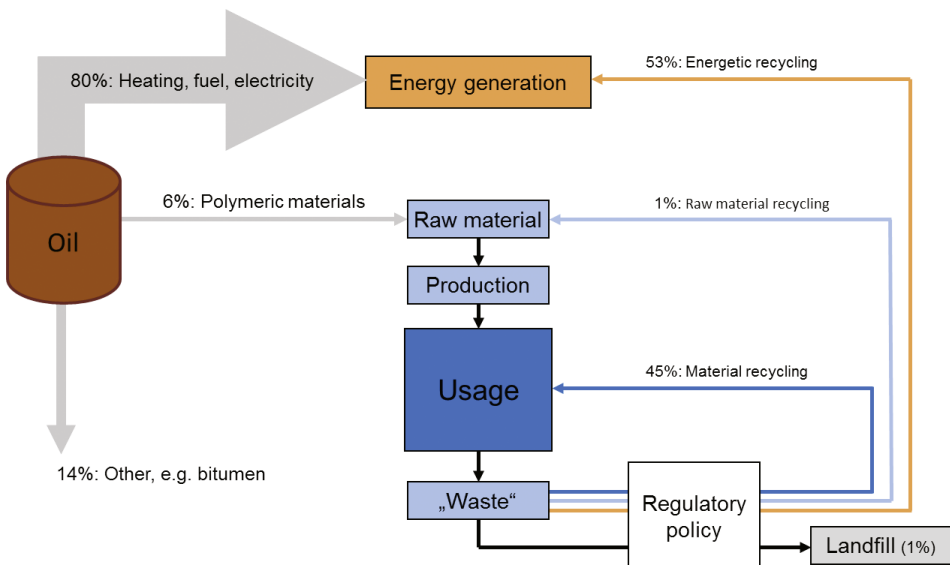


Figure 1.3 Oil as a basis for plastics including recycling of plastic products (according to [5], numbers for recycling according to [6])

■ 1.4 Guide to the Individual Chapters of this Book

This book is divided into four parts.

Book part “A” describes what is meant by polymer processing. Compounding is described in great detail, the path from polymer to ready-to-use plastic.

Part “B”, the processing during the primary production of polymers, focuses on the “degassing” of polymers with the corresponding apparatus and machines.

Book part “C” deals with the extensive topic of compounding. Which additives and other auxiliary materials are used to modify the base polymers and make them ready for use? In “melt compounding”, the additives are mixed in extruders. What types of extruders are available? Which extruders are particularly suitable for compounding and what are the advantages and disadvantages? These questions will be discussed.

Book part “D” deals with further important plant components of a compounding plant. These include topics such as melt filtration, pelletizing as the transition from melt to solid, and the solid processes. Metering and measuring technology are also important components of modern processes.

The editors were able to enlist experts as authors for book parts A to D and coordinated the contributions with the authors. Nevertheless, the contributions reflect the opinions and experiences of the authors. In some points they may differ from the experience of the editors. As a whole, all contributions are a valuable enrichment for the book and we would like to thank all authors once again at this point!

References for Chapter 1

- [1] Kaiser, W.: *Kunststoffchemie für Ingenieure: Von der Synthese bis zur Anwendung*, Hanser Verlag, 4th ed. 2015
- [2] pro-K Industrieverband Halbzeuge und Konsumprodukte aus Kunststoff e.V.: <https://www.pro-kunststoff.de/fachwissen/ptfe-kunststoffe-fuer-den-einsatz-in-sauerstoffanlagen.html>, accessed 9.5.2019
- [3] White, J.L., Coran, A.Y., Moet, A.: *Polymer Mixing*, Hanser Verlag, 2001
- [4] White, J.L., Bumm, S.H.: *Encyclopedia of Polymer Blends: Volume 2: Processing*, Section 1.2 “Methods of Compounding”, 1st ed. Edited by Avraam I. Isayev. Wiley-VCH, 2011
- [5] PlasticsEurope, Association of Plastics Manufacturers
- [6] Consultic: *Produktion, Verarbeitung und Verwertung von Kunststoffen in Deutschland 2015 – Kurzfassung*, 2016
- [7] <https://eu-recycling.com/Archive/21436>: “Wir brauchen weniger und bessere Kunststoffe”, accessed 23.03.2019
- [8] NTV: *Revolution Kunststoff – Ein Material erobert die Welt*, broadcast 13.11.2018
- [9] SWR: *Plastik ist toll – Zeitreise der Kunststoffproduktion*. <https://www.swr.de/odysso/zeitreise-der-kunststoffproduktion/-/id=1046894/did=20400660/nid=1046894/fv9ekk/index.html>, broadcast 16.11.2017

2

Polymer Processing – Process Technology of Polymer Production

Klemens Kohlgrüber

■ 2.1 Introduction

The term **processing of polymers** is used in various ways in the literature. The term compounding is very common, but it is not as comprehensive as the term processing. The latter also includes the processing at the polymer manufacturer. This second chapter describes the process steps involved in processing in polymer production and in compounding. For this purpose, the polymers and the process steps are first considered in more detail.

The term plastic is understood to mean a separate class of materials. In English usage, the term “plastics” is common for synthetic materials. When biopolymers are included as natural substances, then a classification under the generic term polymers is possible, Figure 2.1.

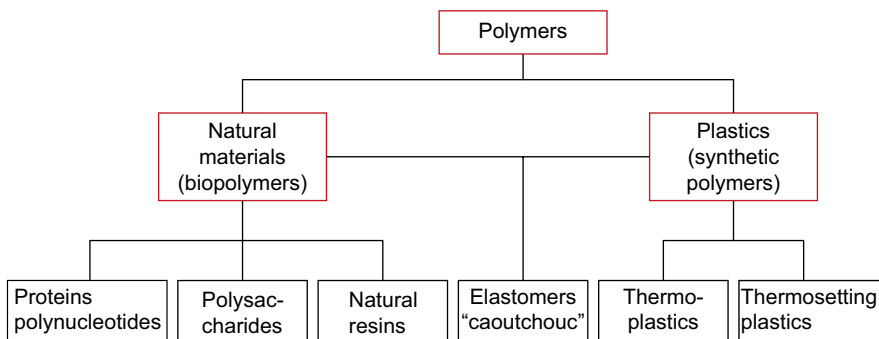


Figure 2.1 Classification of polymers by their origin (based on Kaiser [1] Fig. 1.14)

Polymers consist of macromolecules that have a natural or chemical origin.

If a classification is not based on the origin, but on the properties or the usability of the material, a distinction can then be made in the narrow sense between polymer and plastic; Bonten [2], page 60:

“Plastics are materials consisting of polymers and additives.”

This clearly demonstrates that polymers are the raw materials for plastics, as the “pure base polymers” after their production are generally only suitable for use with additives. This is expressed very clearly in the foreword to the “Handbuch Kunststoff-Additive” (Plastics Additives Handbook) [3] (emphases added by the author):

“Without plastic additives no plastics. This statement applies at least as far as the practical and commercial use of plastics is concerned.

*Additives protect plastics from degradation by manufacturing processes, facilitate their processability, stabilize them against thermal or UV-induced degradation during use, and extend the property spectrum by **modifying material properties**.*

Thus, additives enable the sustainable use of plastics in existing as well as new applications.”

Properties that are influenced by additives are, amongst others:

- Processing stabilization (thermal degradation, oxidative degradation, and application (use))
- Long-term stabilization (heat, light)
- Color
- Stability (fillers for mechanical influence)
- Inflammability (flame retardant)
- Surface effects (lubricants, mold release agents, antistatics)
- “Tendency to mold formation” (biocide)
- Property improvement by “mixing” with other polymers (blends)

The incorporation of additives into a polymer or plastic/rubber is called **compounding**. An overview of which additives are concretely used for the stabilization and modification of plastics is given in Section 4.3 (Diem). Furthermore, reference is made to the very comprehensive relevant literature, for example [3–5]. The terms additional materials and additives are sometimes used synonymously. For better distinction, additives, blends, and fillers are classified as described in Section 4.3. Additives are added in small quantities. Specifically, fillers can amount to more than 50 % by mass of the base polymer and are used to modify properties or reduce costs. Regarding the insoluble fillers, the stiffening effect (stability) is significantly dependent on the type, shape, and orientation of the filler.

A change in the properties of polymers or plastics can be achieved not only by additives, but also by chemical modifications. Thermoplastics, for example, can be cross-linked subsequently ([1], Section 2.2.6 in that reference).



According to the preceding paragraph, it can therefore be stated: Through the process step compounding, a polymer becomes a plastic. The term compounding is expanded in the following to the more comprehensive term **polymer processing**, which not only describes the incorporation of additives, but also includes further process steps which are particularly important in the preparation of the base polymers. The following Figure 2.2 illustrates the process chain from the monomer to the plastic product.

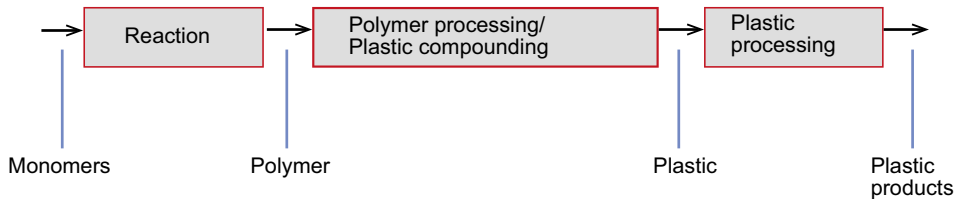


Figure 2.2 Process steps for the production of a plastic product

The term processing has been used by various authors in the past. For example, in 1982 Zettler [22] described the three steps as follows: polymerization, **polymerize processing**, processable thermoplastic. In an article [19] by H. Herrmann, formerly of the company Werner and Pfleiderer, with the subtitle “Die Kunststoff-aufbereitungstechnik 1988” (The Plastic Processing Technology 1988), the term plastic technology was used as a generic term for the three steps shown in Figure 2.2. Furthermore, compounding is not additionally mentioned in the step processing. The mention of the processing without the important but contained compounding is actually better. Since the term polymer processing has not yet been established in this context and compounding is common worldwide, the term compounding is additionally listed as identification in Figure 2.2. The opinion that the term processing in this sense is less well-known is shared by the VDI (The Association of German Engineers), as the annual conference “Plastic Processing Technology” (*Kunststoff-Aufbereitungstechnik*), which has been held for decades, has been renamed “Compounding Conference” (*Compoundiertagung*).

As already described, the terms polymer and plastic are also often used synonymously. If it is not a ready-to-use material, a specification by the term “base polymer” can also be used as a raw material for plastics. The distinction is important from an application point of view. In terms of process, technology, consistency, and the necessary tasks are in the foreground. After the reaction, the polymer is usually existent as solution, powder, or melt; after processing, as granulate or melt. The polymer processing takes place partly simultaneously to the reaction, for example in the polycondensation. It can also be achieved partially during plastic processing (formation of the product part, e.g. via molding), if, for example, there are

still additives to be incorporated. After plastic processing, a finished component is usually available.

The properties of the “base polymers” are essentially determined by the chemical structure, the shape and the order of the molecules (linear, cross-linked) and by the size (molecular weight). Figure 2.3 shows the classic plastic pyramid with some polymers as an example.

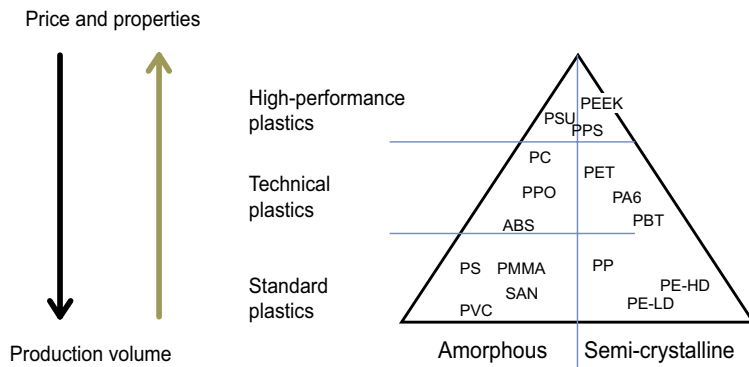


Figure 2.3 Classic plastic pyramid with qualitative depiction for price and characteristics (e. g. operational temperatures) and production volume

The depiction in Figure 2.3 is more likely to be qualitative and is intended to clarify that the high-performance plastics are priced higher and the production volume is low in relation to the standard plastics. In plastic development in the past, emphasis has been placed on the development of new “base polymers”, particularly in order to apply new high-performance plastics with larger profit margins.

Today’s product development for new plastics primarily takes place by compounding, even though research is still being conducted on new polymers. Numerous companies have their own plastics in the program which, by modifications of the base polymers, result in ameliorations of the application properties. In thermoplastics, improved and new plastics are predominantly produced by so-called melt compounding (the terms is described in detail below) in extruders.

In order to emphasize the economic importance of compounding for thermoplastics, Figure 2.4 shows the world production of plastics.

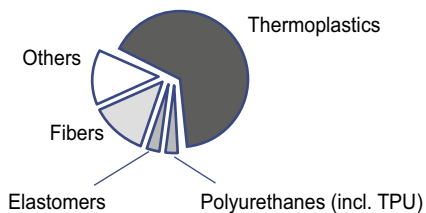


Figure 2.4

Plastic world production

(qualitative; current figures on the page
<https://www.plasticseurope.org/en>)

Thermoplastics dominate with more than 50 % of the world production of plastics. They are often used not only because of the price and the application profile. They can be re-melted several times and thus compounded and several times processed (transformed). Of course, the melting causes a thermal stress and can lead to undesirable quality losses. The procedural step often occurs twice during the manufacture of a plastic product, during compounding and during plastic processing. In a type of **recycling** of plastics, a so-called **recompounding** takes place, in which the “plastic waste” is also melted again.

Elastomers and thermoset material are known to be non-meltable and can be transformed only once and are not transformable after crosslinking.

The consideration of thermoplastics in this book is therefore of particular importance. Figure 2.5 shows an overview of corresponding process steps.

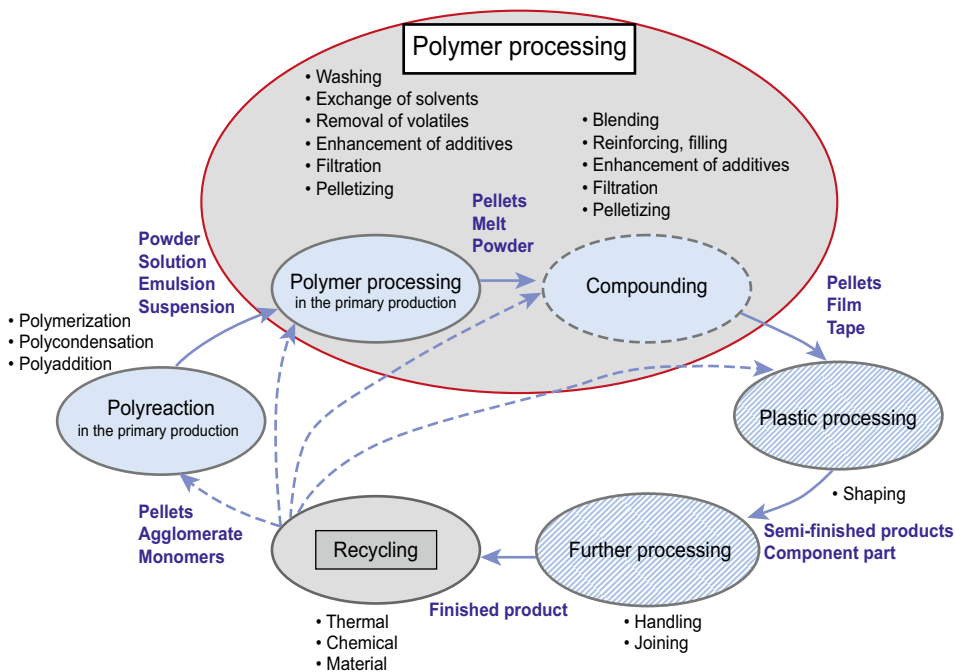


Figure 2.5 Polymer-process technology, overview using the example of thermoplastics

According to Figure 2.5, the term polymer processing includes many process steps, such as melting, degassing (solvent monomer removal), mixing and dispersing, conveying, dosing, extruding (pressure build-up), filtration, pelletizing, etc.

Tasks of Polymer Processing

How can the procedural steps of polymer processing be summarized in a shorter way? Following the literature source [1], the essential tasks of the polymer processing are as follows:

1. Removal of components
2. Incorporation of additives
3. Change of particle size

Kaiser [1] writes: *“The purpose of polymer processing is to produce from the plastic raw material a plastic molding compound with the best possible properties for plastic processing and/or application.”* The plastic raw material usually is a base polymer.

The definition of reprocessing can also be applied to the production of a base polymer, as described in the following Section 2.2 using the example of the thermoplastics. For elastomers, reference is made to the literature, e.g. [5].

In summary, it should be defined according to [2]: the procedural steps from polymer to plastic are collectively called **polymer processing**. Especially the incorporation of additives takes place in the primary production and in the **compounding**, partly also during the **plastic processing**. The term additional materials includes additives (the substances listed previously that are added in small proportional amounts) and other substances such as fillers, whereat the terms are also used synonymously in the literature. Likewise, a distinction is not always made between the terms polymer and plastic. In the past, the term “compounding” was usually not so sharply demarcated from the “polymer processing”.

■ 2.2 Polymer Processing during the Polymer Synthesis in the Primary Production

In order to understand the many and different processing steps of the polymers during their production, consideration of the polyreactions is necessary.

The production of polymers is carried out by **polyreactions** from monomer to the polymer, thus reaction for formation for macromolecules. Instead of polyreactions, the term synthesis reactions or polymer synthesis or, briefly, **synthesis** is used. Depending on the type of production, a reaction engineering or procedural classification can take place.

Classification of Production According to Chemical Reactions

The polyreactions can be classified into three classes ([1] and Figure 2.5):

- Polymerization (chain polymerization)
- Polycondensation (condensation polymerization)
- Polyaddition (addition polymerization)

The nomenclature has changed over time and instead of the term polyreaction, the generic term **polymerization** is used, which may lead to confusion [6]. For the present book this is of minor importance, since the procedural aspects are in the foreground.

Classification of Production According to Procedural Characteristics

From the point of view of the process technology, the manufacturing processes can be divided into three groups [7]:

- Polyreactions in substance (mass polymerization)
- Polyreactions in solution (solution polymerization)
- Polyreactions in dispersion (emulsion, suspension)

The production of a polymer with new properties can also be conducted by mixing different polymers. An example of a polymer blend is ABS.

Polymer reactions in substance are also called **mass processes** and can take place without solvents or other diluents. Therefore, high viscosities can occur already during the reaction. A reaction in mass may be a polycondensation. This splits off a “by-product” that needs to be removed. For example, polycarbonate can be prepared according to the “melt condensation process” or “transesterification process”, wherein phenol is separated and as completely as possible removed by a vacuum from the reaction mass. Thus, a degassing task is existent.

In the polymer reaction in solution, the viscosity of the reaction mass is greatly reduced by the use of solvents. This facilitates heat and material transport and the pumping. Polycarbonate as an example can also be produced by the “interphase process” and one or more solvents are used. After the reaction, the solvents must be removed again, and the polymer must be “isolated”, Figure 2.5 and Figure 2.6. Again, here a degassing task is needed, which is also referred to as “evaporation”.

In the reaction processes in dispersion, a further subdivision into suspension and emulsion can take place; details are in the literature, for example [1, 6, 7].

In the case of polyreactions in substance, a highly viscous mass is already present during the reaction. In the case of polyreactions in solution and polyreactions in dispersion, the highly viscous phase is avoided during the reaction. Then, high-viscosity phases or solid phases occur during the necessary processing. This requires special devices and machinery. At Bayer, Martin Ullrich introduced the term

high-viscosity technology, which has since become established. The author has made an extension to the high-viscosity, mixing, and reactor technology, in order to create an organizational and personnel basis for targeted advances in process technology with appropriate equipment and machinery.

The above description of the various polymer reactions shows that the processing of a polymer is, depending on the nature of the reaction, very diverse in terms of process technology. By the example of a polyreaction in solution (solution polymerization), some process steps of the processing shall be considered.

Directly after the chemically completed polymer reaction, a polymer can be existent e.g. in a solvent or in a solvent mixture. Then the polymer must be “isolated” from the blend. This procedural step of processing to remove the solvent is also called evaporation technology.

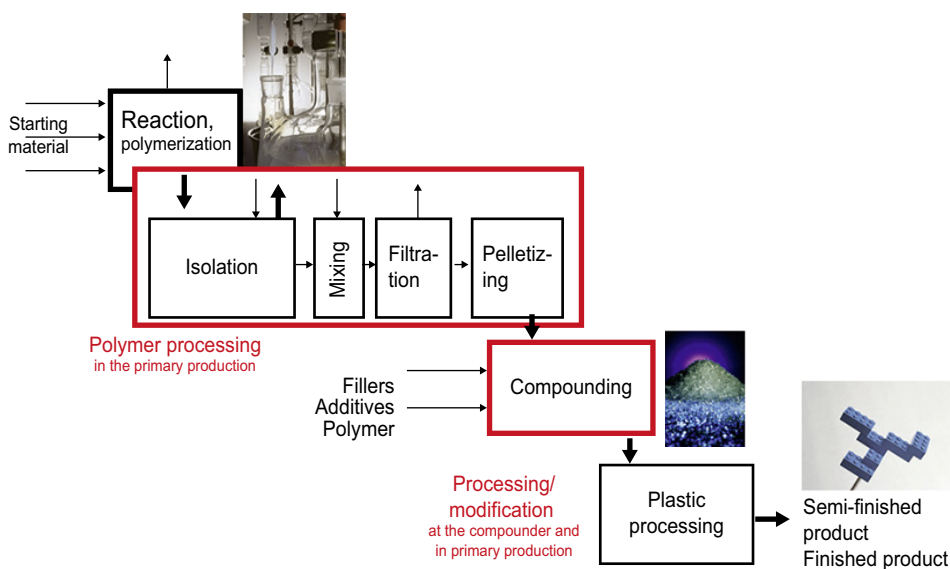


Figure 2.6 Polymer processing in the production and modification, example thermoplastic

Figure 2.6 illustrates the processing in primary production at the polymer manufacturer. In the example, the polymer must be isolated from a polymer-solvent mixture. For product stabilization, an additive is mixed in. Impurities are retained by filtration, followed by pelletizing.

Polymer reactions can – as listed above – also be carried out in “mass processes”, i.e. without solvent. The reaction progress of a polycondensation takes place by the removal of the condensation product. In this manufacturing technique, reaction and processing, removal of volatiles (condensation product), are carried out in parallel.

After the reaction, a polymer can be in the form of powder. Because of the low bulk density and because of the formation of dust, the powder is usually melted (thermoplastic) and shaped to pellets. The granulation is an essential task of the processing and is generalized under the step “change of particle size”. Thermoplastics are usually traded and transported in the form of pellets for further processing, the compounding.

The individual procedural steps in the processing of polymers in their manufacturing process are described in detail in various chapters, for example in Chapter 3, polymer degassing.

■ 2.3 Polymer Processing after the Polymer Production – Compounding

As described in Section 2.1, only additional substances (additives, etc.) enable the sustainable application of plastics. By blending additives into a polymer and mixing different polymers, modifications and new “tailor-made” plastics are created. This processing after the polymer production is called compounding. The compounding can be done at the polymer manufacturer or a compounder. The entire compounding plant is complex and this section describes the core task of compounding. The “heart” of a compounding plant is the associated extruder as this carries out the main compounding step, the melt compounding.

As thermoplastics are mostly available as pellets, during compounding the polymer is melted, has additives mixed in, then possibly degassed, and pelletized again. The central machine in a compounding line is an extruder, Figure 2.7.

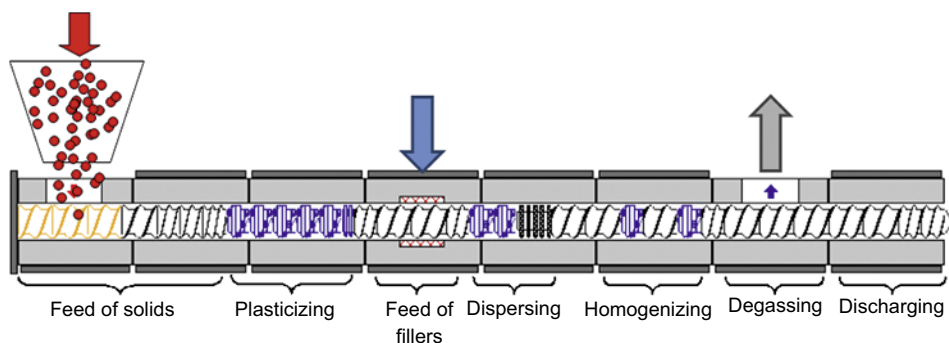


Figure 2.7 Compounding extruder with conventional usual steps

Extruders can melt pellets and mix in additives very economically in a continuous process. The co-rotating twin-screw extruder is mostly used. This type of extruder is described in detail in [8]. An overview of other extruder types is given in Chapter 6 with a comparison in Section 6.8. The production of intermediate products, so called masterbatch production, also takes place with compounding extruders.

Compounding extruders are usually externally dosed, i.e. the throughput is determined gravimetrically by external dosing devices, usually differential weigh feeders.

2.3.1 Main Temperature Window when Compounding for Finish Mixture

The addition of the additives takes place simultaneously with the pellets or even after the plastification after the melting of the pellets. The real incorporation (mixing) of the additives takes place in the melt; that is why we also speak of **melt compounding**. Figure 2.8 illustrates the melt compounding with the main temperature window. In the melt, the finish distribution (by distributive mixing) of the additives takes place.

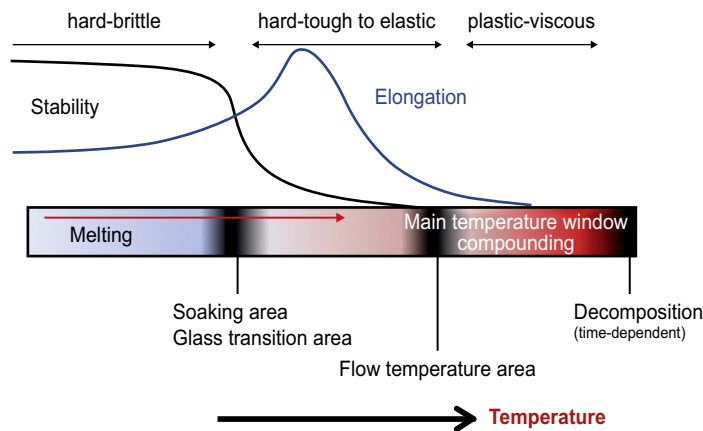


Figure 2.8 Illustration of melt compounding with main temperature window by the example of amorphous thermoplastics

There are hardly any applications in which a solid mixture of the reactants (polymer, additives) is sufficient for the production of a compound. In most cases, a comminution of additives (dispersion) and a fine distribution (distributive mixing) are necessary.

2.3.2 Mixing in the Extruder

Distributive, i.e. distributing mixing takes place in the melt by the very complex flow structure in an extruder. Cross mixing and longitudinal mixing play a decisive role here. The differences in effect between the cross mixing and the longitudinal mixing are described in more detail in Section 2.3.11.3.

Extruders can also dispersively mix very well, thus split solid matter or drops. The disperse mixing of, for example, solid additives takes place particularly well at high shear stress as described in the following Equation 2.1 [8, Equation 2.14 in the *Applications* book].

$$e_{melt} = \tau_m \cdot \bar{t}_{melt} \cdot \dot{\gamma}_m / \rho_m = \eta_m \cdot \bar{t}_{melt} \cdot \dot{\gamma}_m^2 / \rho_m \quad (2.1)$$

In the lower temperature range of the melt, the viscosity is higher and the dispersing effect better. On the left side there is the specific energy input, e.g. in the unit of J/kg. On the right side of the equation, there are the shear stress or melt viscosity and the mean dwell time of the melt, two quantities that are very important for disperse mixing. Both quantities must exceed boundary values in order to enable the splitting of particles (or drops of liquid). In other words, the agglomerate diameter resulting from disperse mixing depends on the height of the shear stress and the dwell time. For the splitting of agglomerates, a minimum shear stress – depending on the properties of the solid matter – is necessary which cannot be compensated by a longer mixing time. As the splitting of solid additives depends on the melt viscosity, there is also a dependence on the polymer. For example, ABS has a considerably higher viscosity level in the melt area than PA6. Dispersion in a PA6 melt is thus more difficult.

Also below the main temperature window there is a good dispersion, for example in the melting area, Figure 2.9.

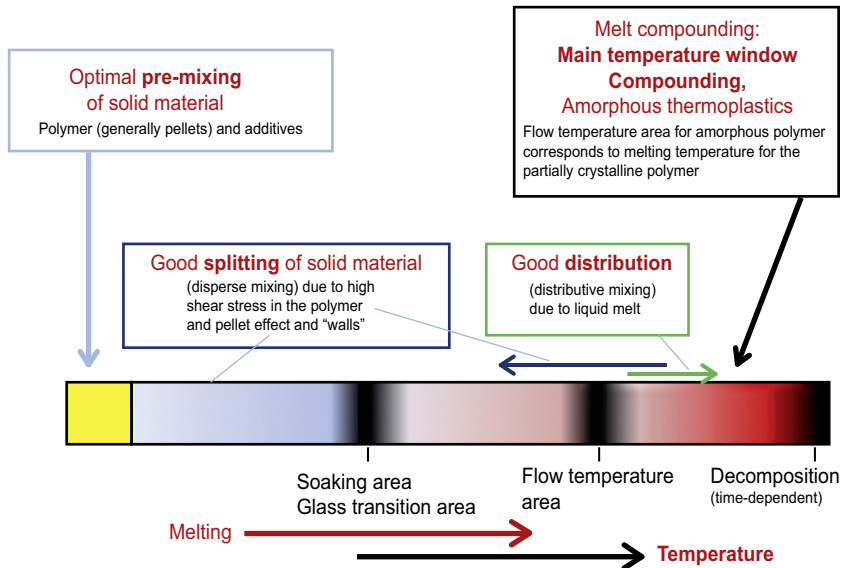


Figure 2.9 Important temperature and mixing ranges during compounding, illustrated by the example of amorphous thermoplastics

Solid matter is comminuted before and in the melting area by the “walls” of housing and screw and by not yet melted pellets by different types of stress. The usual types of stress [23] are illustrated in Figure 2.10.

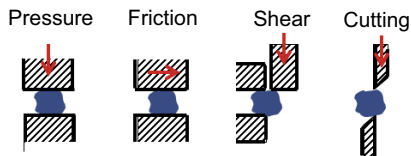


Figure 2.10

Types of stress for the comminution of solid matter

The polymer is usually existent as pellets. Pellets and additives or only additives can be premixed. A premixing (outside the extruder) may be useful for several reasons. A premixing of solid materials is usually associated with a much lower energy consumption than the mixing in the “viscous” melt area. Furthermore, the number of dosings (generally with differential weigh feeders) can be reduced. On the other hand, for difficult mixing tasks it may be advantageous to implement different addition positions, as the following description shows.

In principle, it is possible to mix distributively and disperse in the compounding extruder from the entry of the substances until the discharge of the compound. Due to the different effectiveness of the mixing effects (e.g. according to Figure 2.9, left, in the pellet and melting area, or right, in the melt area), different dosing concepts can be realized. Example: For compounding, a solid additive is to be in-

corporated into a polymer, whereby it is not only be mixed in a distributive manner, but also to split (diminish) it. According to Figure 2.11 different dosing possibilities arise.

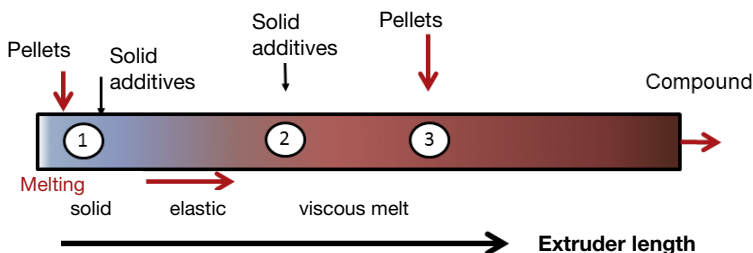


Figure 2.11 Compounding extruder: sketch illustrating different dosing concepts for mixing and dispersing additives in the polymer

In variant 1, the polymer pellets and the additive are dosed into the extruder at position 1. In this case, the additive in the pellet/melting area receives a dispersion through the pellets due to crush and friction processes. Whether a further dispersion of the solid additives takes place downstream in the melt depends amongst other things on the viscosity of the melt. At low viscosity (and thus shear stress = viscosity multiplied by shear rate), the dispersion effect is poor, Equation 2.1. If the viscosity is sufficient for dispersion, the additive can also be added at position 2. To increase the mixing viscosity downstream of position 2, it is also possible to dose only a partial stream of the polymer in position 1 and the additives at position 2. The amount of the remaining polymer needed for the mixture for the correct formulation can be added at position 3 and mixed in downstream.

In addition to the described position displacement of the feed positions due to the dispersion effect, there are other reasons for different feed positions, such as wear in the feed area or volatile matter of (then mostly liquid) additives which should not escape with the disappearing air during melting. Furthermore, small amounts of low-viscosity additives can hinder the formation of melt film necessary for plastification.

Finally, a distributive finish mixing in the main temperature window (mixing in the melt) is generally required. The main temperature window during compounding is above the flow temperature range for amorphous products or the melt range for partially crystalline polymers and below the decomposition. Example values for a polymer: The flow temperature range starts at PC according to Frank [6, page 98] at approx. 230 °C, also depending on the PC type (injection molding of low viscosity or high viscosity extrusion type differ). For the description and modeling of the melting of amorphous polymers (which do not have a sharp melting point) with experiments on single-screw extruders, a critical flow temperature is specified in

Han [9, Chapter 2], which is 200 °C for polycarbonate. In the following, the flow temperature range is considered again: according to Figure 2.17, 200 °C is a good “average value” for PC.

2.3.3 Temperature and Time Limits for Compounding

Compounding takes place very economically at high throughputs utilizing the specification limits of the compound. A limit is the thermal damage of product. Information in the literature about a temperature at which the chemical damage and finally decomposition begins often refers to longer exposure times. The decomposition depends, among other things, on temperature and time, and is thus not a pure temperature function. Figure 2.12 shows this connection qualitatively.

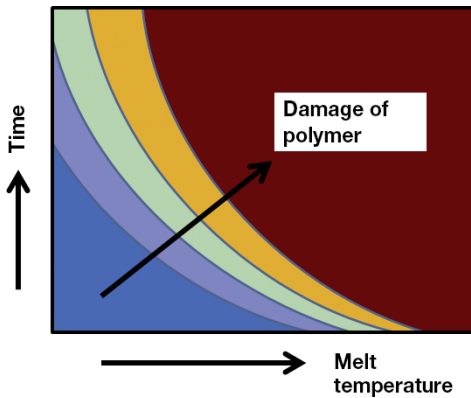


Figure 2.12

Damage of a polymer melt due to temperature-time stress (qualitative)

The beginning of a damage is given in Frank [6, Fig. 3.3.2], for example, for PC in [6] from about 320 °C. PC would endure this melt temperature for approximately 10 minutes until the beginning of an intolerable damage, as discussed below. For very short periods of time, the PC melt also withstands 400 °C. Therefore, the temperature limit of the product damage with the related temporal load should be considered in more detail.

According to a compounding process, the product temperature rises from melting to the main temperature window. In an extruder, the product is subject to a temporal temperature curve $T(t)$. The thermal product load or damage S can be described by an Arrhenius approach with integration over the temporal progress, Equation 2.2.

$$S = K \cdot \int_0^{t_E} \exp\left(-\frac{a}{T}\right) dt \quad (2.2)$$

Where T is the temperature in Kelvin [K] and t is the time.

To compare the temporal load of a melt for different temperatures, constant temperatures T_E are considered, Equation 2.3:

$$S = K \cdot t_E \cdot \exp\left(-\frac{a}{T_E}\right) \quad (2.3)$$

For a clear quantitative idea of the temperature-time limit in the main temperature window compounding according to Figure 2.8, the parameters a and S/K should be roughly considered using the example of a polycarbonate type PC. Assuming that the damage of a 10 K higher stressed melt doubles at the same residence time, the parameter a would be, according to Equation 2.3, approx. 27,000 K, when a reference temperature of 350 °C is assumed.

On the other hand, the residence time t_E can also be calculated up to a certain damage, for example up to a still tolerable damage S , Equation 2.4:

$$t_E = (S / K) \cdot \exp\left(\frac{a}{T_E}\right) \quad (2.4)$$

By fixing a point (t_E, T_E) , the pre-factor S/K in Equation 2.4 can be determined. One example for polycarbonate is here $S/K = 10^{-17}$ s (s = seconds).

Figure 2.13 clearly shows the result of the quantitatively rough calculation for the temperature-time load limit.

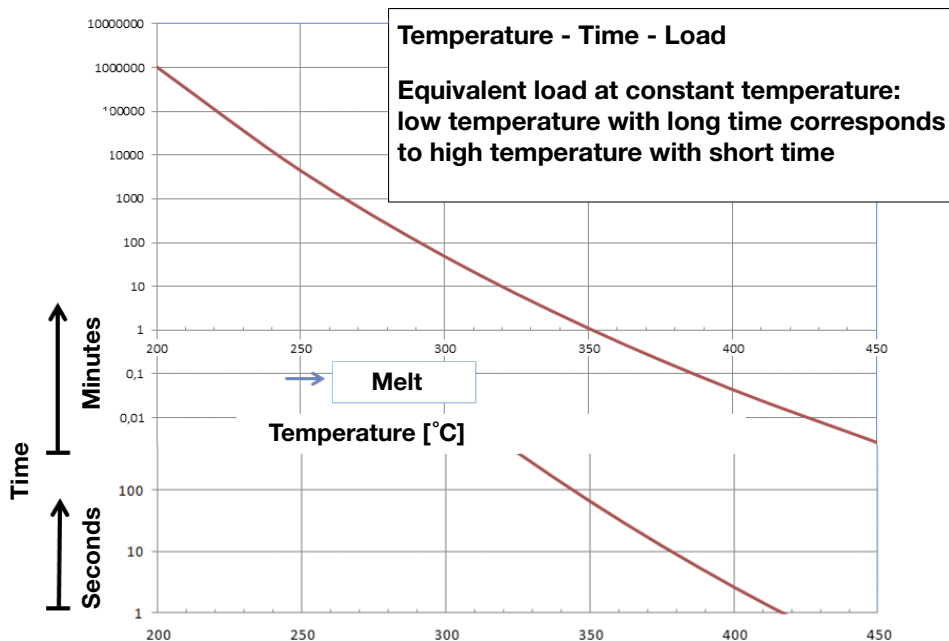


Figure 2.13 Equivalent temperature-time load limit for a polycarbonate example

In the case of a PC melt at 350 °C, the still tolerable damage limit occurs after one minute as shown in Figure 2.13. At 420 °C, the same damage is achieved after about one second. Normally, the temperature-time window for compounding is below the limit specified in Figure 2.13. The average residence times in traditional compounding extruders are today less than half a minute. However, a small proportion of polymer in the extruder, for example in gaps with high shear and thus temperature load, can come up to the damage limit. It should be noted that the damage, for example the Yellowness Index, depends not only of the thermal load, but also on the additives, for example the solvent and the solvent portion used. This displaces the damage limit in Figure 2.13. In particular, also a contact of the hot melt with air (oxygen) is to be avoided! Furthermore, it should be noted that the above-mentioned damage limit can change quantitatively due to changed specifications. In practice, due to economic reasons, it will be produced close to the specification limit. High throughputs are generally more economical, as illustrated by the simple principle depiction in Figure 6.7 in Chapter 6. See also Figure 2.14.

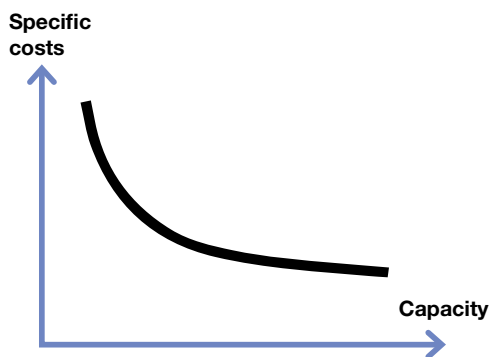


Figure 2.14 Schematic relationship between capacity and specific costs

High throughputs usually mean also a higher product temperature as the higher throughputs are usually only attainable at higher speeds. In fully filled extruder sections, the mean residence time falls in fact, and thus the temperature; however, with increasing throughput, with increasing speed, the mean temperature increases disproportionately. This is expressed by Equation 2.1 ($t \sim 1/\text{throughput}$, $n \sim \gamma$, $T \sim e$).

All in all, the temperature window for compounding PC compared to some other plastics is large (see also Figure 2.15). PC is more “stable” than PVC, for example. For PVC, the flow temperature area starts at about 175 °C and the damage range starts at about 210 °C [6]; for the last value, again a load duration applies.

Despite the problem of specifying permissible melt temperatures due to lack of time allocation, literature data on common temperature windows in the melt area [10] are given here, Figure 2.15.

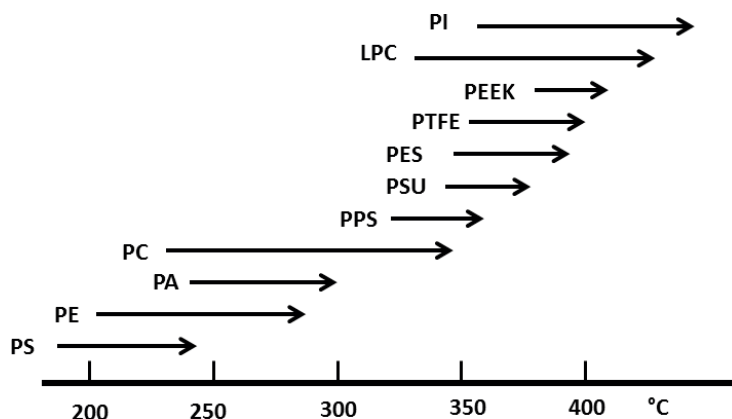


Figure 2.15 Processing temperature range of some types of plastic according to [10, Fig. 5, page 233]

Because of the “flowing limits” of reference values, other temperature ranges can also be found in the literature, for example in [6, chart 7.4.1] and [11, Fig. 3.4].

In order to keep the thermal polymer damage low, the temperature-time load should be minimized. As the temperature and residence time increase, undesirable side reactions, such as back reaction, degradation, and yellowing, increase. Oxygen contact also leads to increased damage at higher temperatures. Long melt residence times, for example in connecting lines between plant components, should be avoided.

2.3.4 Challenges when Compounding

Compounding is associated with special challenges:

- The “temperature window” for compounding can be small and lies before the thermal damage (explanations above).
- The material data (viscosity and others) of the mixtures are usually unknown.
- The melt behavior usually has to be determined experimentally.
- The melt behavior with additives can vary significantly.
 - Small amounts of low-viscosity additives may hinder the melt film formation necessary for plastification.
 - Conversely, highly viscous or solid additives cause an increased heat dissipation which can lead to thermal product damage.
- Additives do not always change only one property of the polymer/plastic, but can also change several properties. For example, dyestuffs for coloring plastics can not only change their appearance, but also other properties [12].

- In large extruders, product cooling via the housing is hardly possible.
- Not all extruder types are suitable for melting, in particular not for very high throughputs with the required drive energy (Section 6.8, Extruder Types – Comparison, Figure 6.110).
- Some polymer blends cannot be produced as there are different main temperature windows.

The last two points are explained in more detail: For mixing of polymers (so-called blends), the flow temperature range (Figure 2.8) must be exceeded. The flow temperature range can be so high in a polymer where another polymer is already decomposed, thermally damaged. Figure 2.16 shows examples of three products with different temperature windows.

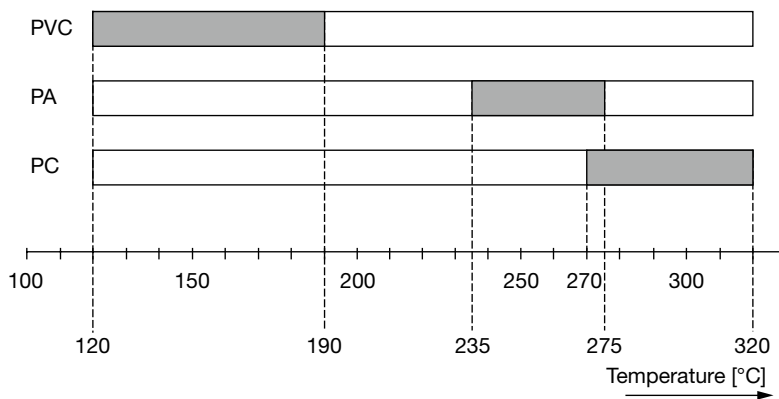


Figure 2.16 Melt temperature window for three polymers according to [13, Fig. 10.2]

The flow temperature range of polycarbonate (in the example a low viscosity CD type) begins only at a temperature level at which PVC already decomposes. It is impossible to produce a homogeneous plastic melt from these two polymers.

The temperature range of PVC in Figure 2.16 according to [13] differs from the information given above for PVC from the source [6], in particular with regard to the start of the flow. It should be noted that the flow, i.e. the viscous area, begins at a higher temperature (at about 175 °C) for rigid PVC and at lower temperature for soft PVC.

How else can the information about a “flow temperature” differ? It must be noted that a flow temperature is physically not exactly defined [6] and amorphous plastics always have a flow temperature range. Often, a flow temperature is then indicated from the lower area where an extrusion becomes possible. Figure 2.17 shows the flow temperature range for a medium viscosity PC type and the dependence on the measurement frequency [14]. The entropy-elastic range ($T_F - T_g$) increases with increasing frequency, whereby no increase occurs from about 500 Hz. It is also concluded that the flow temperature at faster compression is shifted to signifi-

cantly higher temperatures [14, page 115]. Therefore, the “melting temperature” T_F in extruders during melting of pellets is displaced in direction of higher temperatures. It was already referred above to the modeling of the melting in extruders [9, Chapter 2]. The temperature specification of 200 °C is in the range of the limits shown in Figure 2.17.

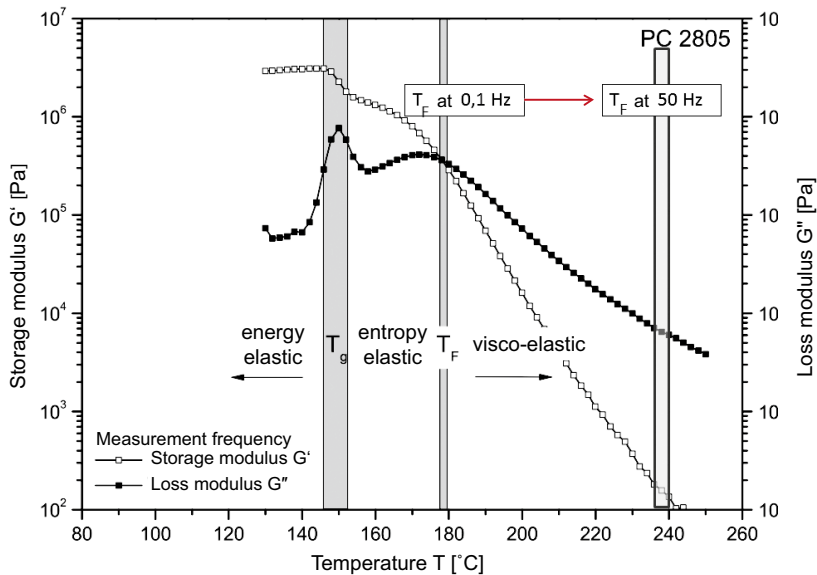


Figure 2.17 Glass temperature T_g and flow temperature range T_F for a medium-viscosity PC type [14] and change by the measurement frequency (the curves belong to 0.1 Hz)

For partially crystalline plastics, the flow temperature range is distinctly clearer and narrower, and the melting temperature of the crystallites is used as a sharp limit, Figure 2.18.

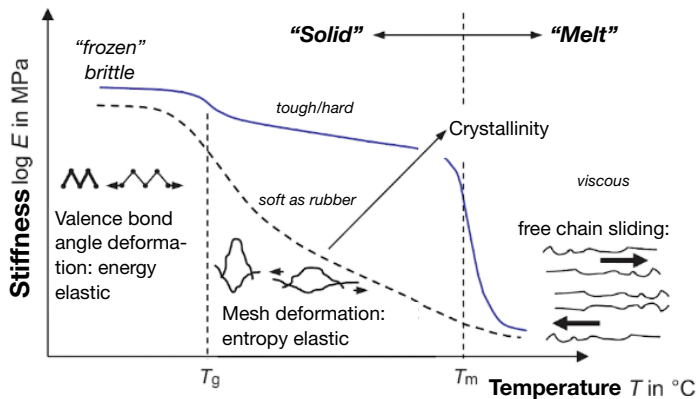


Figure 2.18 Deformation behavior of thermoplastics in dependence of temperature [15, Fig. 1.5]

2.3.5 Energy Requirement when Compounding

The compounding step which is carried out after the primary production can be directly coupled procedurally at the polymer manufacturer. Then the pelletizing and repeated melting of thermoplastics between the two processing steps (Figure 2.5 and Figure 2.6) can be omitted. This is energetically more economic and gentle regarding the product, but means a more complex overall line with low operational safety and flexibility as far as the variety of products is concerned.

Normally, compounders modify the polymers and create their own products with improved properties. The compounder receives the polymers normally as pellets – sometimes as powder – from the polymer manufacturer and therefore thermoplastics must be re-melted. Rubbers are not melted. Plasticizing in rubber technology means converting a viscoplastic state at room temperature into a sufficiently flowable state by converting mechanical drive energy into heat [5].

Required Specific Energy

As shown in Section 2.3.9, the required drive energy of the extruder shaft(s) P_W is expressed with the specific energy:

$$e_W = \frac{P_W}{\dot{M}_A} = \Delta e_{product} + e_{housing} + \Delta e_{pressure} + e_{degassing} \quad (2.5)$$

This means

$$\Delta e_{product} = c_A \cdot T_A - e_E \quad (2.6)$$

with

$$e_E = \sum (c_{Ei} \cdot T_{Ei} \cdot m_{Ei}) \quad m_{Ei} = \dot{M}_{Ei} / \dot{M}_A \quad (2.7)$$

the specific energy of the input flows, thus usually of the base polymer and of the additives. The mass flow \dot{M}_A is the mass flow of the compound that is discharged by the extruder. Equation 2.6 contains the specific heat capacity c_A of the compound at the extruder outlet, which consequently is of major importance.

Figure 2.19 shows the specific heat capacity of a polymer with the main temperature window for finish mixing of the additives, which is between T_1 and T_2 . The importance of T_1 and T_2 is depicted in Figure 2.8. T_1 describes the flow temperature range described above, and T_2 the area where the damage is noticeable. According to the above descriptions, the temperature range T_2 is to be considered together with the temporal stress.

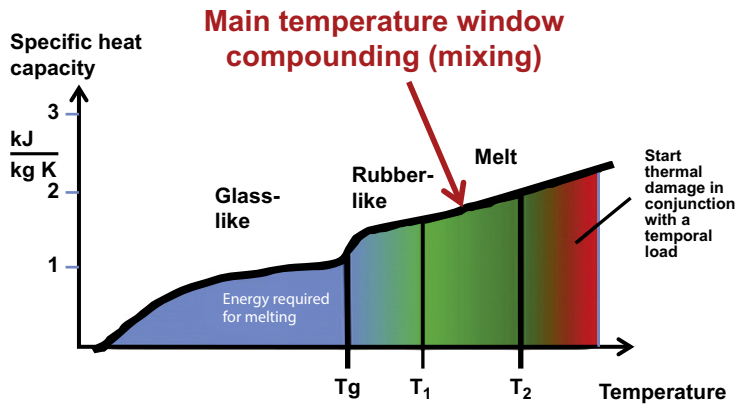


Figure 2.19 Energy requirement (area) for melting an amorphous thermoplastic [6, Fig. 6.3]

It is apparent that the essential part of compounding extruders is needed for the melting of the polymer. For simplification, only the polymer is considered instead of the mixture of polymer and additives, i. e. only the energy necessary for the temperature change from the extruder inlet to the extruder outlet of the base polymer without additives. The required energy input is represented by the area under the curve in Figure 2.19. Enthalpy temperature diagrams are more useful because by means of these the required energy can be read off directly.

As an example, Figure 2.20 shows the specific enthalpy for different types of polyamide [16].

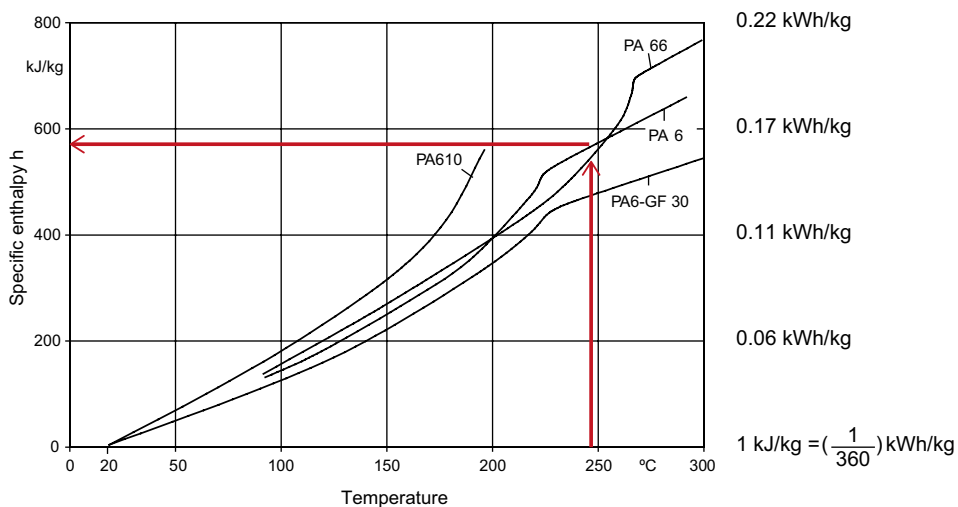


Figure 2.20 Specific enthalpy for different types of polyamides (based on [16, Fig. 3.43])

The enthalpy change must be introduced into the polymer (proportional to D^3) by the extruder via the shafts. An energy portion can also be introduced via the housing walls. For larger extruders, this proportion is low (areas proportional D^2).

For the specific drive energy

$$e_{\text{extruder}} = P_W / \dot{M}_A \quad (2.8)$$

of extruders, the unit kW divided by kg/h is common. The unit customary for the specific enthalpy is kJ/kg; this can also be expressed in kWh/(kg/h):

$$1 \text{ kJ} / \text{kg} = \left(\frac{1}{3600} \right) \text{ kWh} / \text{kg}$$

Figure 2.21 shows this trivial correlation relating to ton/hour [t/h] for production machines. In addition, the performance is given in dependence on the throughput in Figure 2.22, where with the double logarithmic representation small throughputs are easier to read off.

Energy in kW per t/h throughput

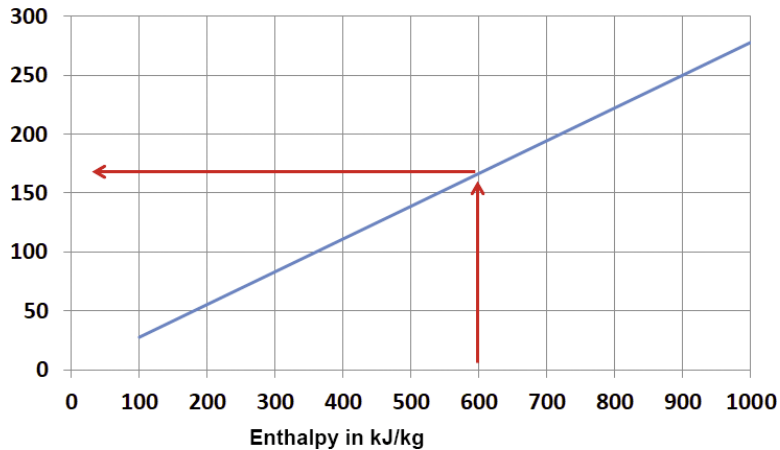


Figure 2.21 Required (minimum) drive energy of extruders for melting or for enthalpy changes (temperature changes) of polymers

Figure 2.21 and Figure 2.22 show the required minimum drive energy of an extruder to melt the polymer. Example: To melt PA6, just under 600 kJ/kg (= 0.17 kWh/kg) is required according to Figure 2.20. For a line with a throughput of 10 t/h, a minimum drive energy of approx. 170 kW · 10 = 1.7 MW is required according to Figure 2.21.

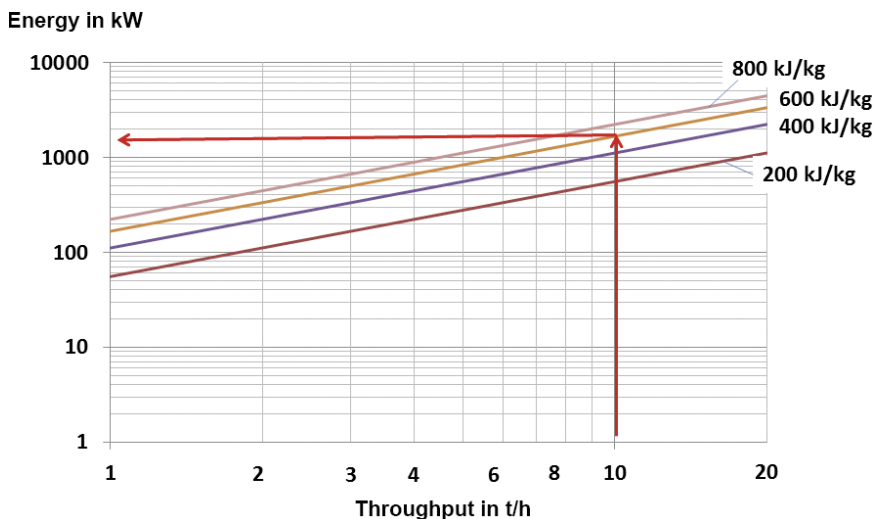


Figure 2.22 Required (minimum) drive energy of extruders in dependence on the throughput with the required enthalpy change as parameter

In addition, there are energy inputs, which are given in Equation 2.5, that are introduced into the product by the extruder shafts and which, in addition to the enthalpy change (temperature change), lead to further energy release by the product. The energy portion for the pressure build-up is low, however. For a pressure difference of 50 bar between product outlet and inlet, assuming average material data, only about 5 kJ/kg is needed. This is about 1/100 of the proportion of the above numerical example for the enthalpy change. The energy portion of the cooling via the housing walls is also low in production machines, as shown in an example in Section 5.7 (Bierdel), below 5%. The proportion e_{housing} (sum heating minus cooling) is thus small in large compounding extruders compared to the enthalpy change of the product.

To calculate the electrical power, the energy losses of motor and gear (degrees of efficiency) must be added in addition to the required shaft energy.

Corresponding extruders with high drive energy are machines and not lightweight apparatus. Not all extruder types allow high throughputs with simultaneous melting of the polymer. Actual maximum throughputs are given in Section 6.8 (Extruder Types – Comparison).

Figure 2.21 and Figure 2.22 can also be used for so-called “melt feed extruders”, i.e. extruders that do not need to melt polymer. These extruders are also called “hot feed extruders”. Then, the enthalpy difference is decisive, which results from the difference between the discharge temperature of the product and the inlet temperature. Attention must be paid to mixtures, and, especially for degassing extruders, to the portion of volatile matter (evaporation enthalpy). The equations given in Section 2.3.9 take these proportions into account.

A comparison of amorphous polymers with partially crystalline ones shows that in partially crystalline polymers on average almost twice the melting energy is needed.

2.3.6 Range of Performance of Extruder

The above describes what drive energy a polymer requires during compounding. Which drive capacities do extruders offer? In order to consider the drive capacity independently of the exact screw diameter, a diameter is chosen as reference value. As described in the introduction to the co-rotating twin-screw extruder (Section 5.1), a reference diameter makes sense from a procedural point of view. As the co-rotating twin-screw extruder is the standard extruder in compounding, this is considered as an example of performance density and compared to a single-screw extruder.

Torque Density, Performance Density

For single-screw extruders, the torque of the shaft can be considered in relation to the diameter. The manufacturers of co-rotating twin-screw extruders specify the torque of a shaft related to the center distance.

Neglecting the clearance between the shafts, with the center distance $A = (D_a + D_i)/2$ and the torque M_{d1} of a shaft, the following relationship applies:

$$\frac{M_{d1}}{D_a^3} = \frac{M_{d1}}{A^3} \cdot \frac{1}{8} \cdot \left(1 + \frac{D_a}{D_i} \right)^3 \quad (2.9)$$

The values M_{d1}/A^3 and D_a/D_i are given by the manufacturers. With the total performance $P = z \cdot M_{d1} \cdot 2 \cdot \pi \cdot n$ with $z = 2$ for two shafts, the following performance density P_{LD} can be defined:

$$P_D = \frac{P}{D_a^3 \cdot n} = z \cdot 2 \cdot \pi \cdot \frac{M_{d1}}{D_a^3} \quad (2.10)$$

Example:

$$\frac{M_{d1}}{A^3} = 15 \frac{\text{Nm}}{\text{cm}^3} \quad \frac{D_a}{D_i} = 1.66$$

which results in:

$$\frac{M_{d1}}{D_a^3} = 7.71 \frac{\text{Nm}}{\text{cm}^3} \quad \frac{P}{D_a^3 \cdot n} = 96.9 \frac{\text{Nm}}{\text{cm}^3}$$

The performance density is, like the torque density, not dimensionless and has the same unit. A torque density thus corresponds to a performance density. The extruder user is primarily interested in what performance is needed for a certain throughput. The performance offered by the extruder can be calculated directly with the performance density. For this purpose, the units are advisably chosen so that the screw diameter can be applied in millimeters and the speed in 1/minute:

$$\left[\frac{\text{Nm}}{\text{cm}^3} \right] \cdot 60 \cdot 10^6 = \left[\frac{\text{kW} \cdot \text{min}}{\text{mm}^3} \right]$$

The performance density per shaft makes limited comparison possible with single-screw extruders or with multi-shaft extruders. Limited because the reference diameter can be defined differently. The extruder user is mainly interested in what throughputs can be realized. That is why the attainable speeds are very important.

Example Rubber Extruder

The permitted finish temperatures for rubbers are generally much lower than for thermoplastics, and the extruder speed and throughputs are correspondingly low. Basic data for so-called cold extruders are described in [5, Fig. 10.13]. Example: For a pin type extruder with a screw diameter of 300 mm, a drive power of 800 kW and a speed of 20/min are specified. The throughput is about 7 t/h (see also Figure 2.22). The speeds for co-rotating twin-screw extruders for thermoplastics are considerably higher: On a larger co-rotating twin-screw extruder with 380 mm screw diameter, 130 t/h of polyethylene (LLDPE/HDPE) are processed. It should be noted that the pin type extruder for rubber is a single-screw one, whereas that for polyethylene a twin-screw one.

The pin type extruder for the example rubber provides:

$$\frac{P}{D_a^3 \cdot n} = \frac{800 \text{ kW}}{300 \text{ mm}^3 \cdot \frac{20}{\text{min}}} = 88.9 \frac{\text{Nm}}{\text{cm}^3}$$

This is a value of the same size as the value of the twin-screw extruder (the value for the twin-screw extruder applies for two shafts, which corresponds to the total range of performance).

The twin-screw extruder is used for thermoplastics at higher speeds, in particular small machines can be operated at very high speeds. Figure 2.23 shows the simple connection, the performance P/D^3 for the example with Equation 2.10 in dependence on the screw speed.

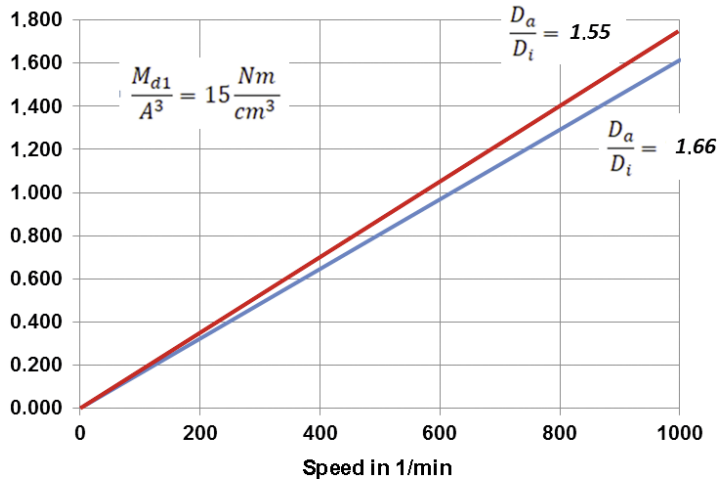
Performance P/D^3 in W/mm^3 

Figure 2.23 (Offered) performance density of co-rotating twin-screw extruders in dependence on the screw speed with D_a/D_i as parameter

A numerical example for Figure 2.23: For an extruder with a diameter of 133 mm and $D_a/D_i = 1.55$ (Coperion) at 1000 revolutions per minute, a performance value of $1.75 W/mm^3$ arises. If this value is multiplied by $133^3 mm^3$ this results in a performance of 4.1 MW. In a table from Coperion [17], 4.4 MW is stated for the motor performance as, amongst other things, also the dissipation loss of the gear (efficiency) is added.

Normally, the permissible torque M_{d1}/A^3 also changes with the diameter ratio. This will be dealt with in Section 5.1, where different diameter ratios are considered under different aspects.

The torque density specified by extruder manufacturers usually is the maximum available. A maximum available torque density M_{d1}/A^3 results in a maximal offered performance density $P_{Wmax}/(n \cdot D^3)$.

$$P_{D,Wmax} = \frac{P_{Wmax}}{n \cdot D^3} = z \cdot 2 \cdot \pi \cdot \frac{M_{d1,max}}{D^3} \quad (2.11)$$

The additional index W indicates that this performance is applied to the shafts. In Section 6.8, Extruder Types – Comparison, further performances of the extruder drive including the electrical drive performance are considered.

2.3.7 Throughput and Performance Density

The extruder throughput can be formulated dimensionless with the throughput key figure

$$\dot{V}^* = \frac{\dot{V}}{n \cdot D^3} \quad (2.12)$$

with the volume flow \dot{V} , the speed n , and a reference diameter. The throughput key figure is discussed in the relevant literature from Kohlgrüber [8] and Pawlowski [21], and is the most important key figure for extruders. Previously, Q was also used as a formula symbol.

For the polymer producer or compounder, the mass throughput is decisive. With the mass throughput \dot{M} and a density ρ , the dimensionless volume flow is $\dot{V}^* = \dot{M} / \rho$. As the density changes in dependence on, inter alia, temperature, it is also useful to select a reference density $\rho_B = 1 \text{ kg/l}$ for comparison purposes. This can be used to define the following throughput key figure.

$$\dot{V}_B^* = \frac{\dot{M}}{n \cdot D^3 \cdot \rho_B} = \frac{\rho}{\rho_B} \cdot \dot{V}^* \quad (2.13)$$

The performance density according to Equation 2.10 can be expressed with the throughput key figure \dot{V}^* and the specific performance e .

Neglecting the clearance between shaft and housing, the housing diameter D can be replaced by D_a . Together with the specific drive performance, the following arises for the performance density:

$$P_D = \frac{P}{n \cdot D^3} = e \cdot \dot{V}^* \cdot \rho = e \cdot \dot{V}_B^* \cdot \rho_B \quad (2.14)$$

Throughput Density

For example, the polymer blend density changes with the temperature or is unknown. Then, alternatively, as described above, the dimensionless throughput key figure \dot{V}_B^* may be used with the reference density. Another possibility is to introduce a dimensioned throughput density:

$$\dot{M}_D = \frac{\dot{M}}{n \cdot D^3} = \dot{V}^* \cdot \rho \quad (2.15)$$

The throughput density describes clearly the throughput per revolution related to the screw diameter cubed.

$$\dot{M}_D = \frac{\text{throughput per revolution (e.g. in kg / rev)}}{\text{screw diameter}^3} \quad (2.16)$$

The required enthalpy change described above (e.g. for melting) results in the minimal required specific drive performance e_{\min} , if the heating performance via the housing is not considered and other emitted energies (cooling, evaporation enthalpy, etc.) are ignored. This results in the dimensionless throughput key figure, as shown in Equation 2.14:

$$\dot{M}_D = \frac{P_{D,Wmax}}{e_{\min}} = \dot{M}_{Dmax} \quad (2.17)$$

As a maximum value is the quotient in the equation, Equation 2.17 gives the maximal throughput density.

Equation 2.17 clearly shows that higher throughput rates are possible in extruders if

- e_{\min} is smaller, i.e. the required enthalpy change from the product is lower (e.g. amorphous versus crystalline polymer)
- the torque density M_{d1}/A^3 or M_{d1}/D^3 is greater

Advantages of the throughput density:

- By standardization, the throughput density is independent of the speed and the actual extruder size. Big and small machines can be compared, which is important for scale-up and scale-down considerations.
- A comparison of single-screw and multi-screw extruders will be made possible.

For this the throughput density per screw can be considered:

$$\dot{M}_{D1} = \frac{\dot{M}_{1W}}{n \cdot D^3} \quad (2.18)$$

with z = number of screws and $\dot{M}_1 = \dot{M}/z$ the throughput per screw.

The consideration of the known conveying key figure [8] is also useful.

$$\Lambda = \frac{\dot{V}}{\dot{V}_{max}} = \frac{\dot{V}^*}{A_1} \quad (2.19)$$

Here A_1 is a conveying parameter which is also called profile parameter as it depends only on one special screw geometry.

It is possible to define a conveying parameter $A_{1,1}$ that relates to one shaft only.

$$\Lambda = \frac{\dot{V}}{\dot{V}_{max}} = \frac{\dot{M}_{D1}}{A_{1,1} \cdot \rho} \quad (2.20)$$

Applications of the equations to a comparison of extruders:

If the twin-screw ($z = 2$) is compared with the ring extruder ($z = 12$), then it follows for the same (total) throughput \dot{M} of both machines:

$$\dot{M} = 2 \cdot \dot{M}_{1W,e} = 12 \cdot \dot{M}_{1W,ring} \quad (2.21)$$

and with Equation 2.18 and Equation 2.20:

$$2 \cdot n_{twin} \cdot D_{twin}^3 \cdot \Lambda_{twin} \cdot A_{1,1twin} = 12 \cdot n_{ring} \cdot D_{ring}^3 \cdot \Lambda_{ring} \cdot A_{1,1ring} \quad (2.22)$$

The same operating point Λ is considered for both extruders. The conveying behavior of a screw geometry is described by the conveying parameter $A_{1,1}$. It describes the maximum dimensionless throughput of one screw element per shaft. It is known [29] that a twin-screw extruder has a higher inherent throughput due to the gusset than a single-screw extruder with the same geometry (i.e. geometry of the twin-screw), although the eight-shaped cross section of the twin-screw is less than twice the cross section of the twin-screw. In the case of the ring extruder, one gusset is assigned to each shaft, whereas in the case of the twin-screw only one gusset is assigned to two shafts. Thus, it follows that $A_{1,1Ring} = a \cdot A_{1,1twin}$ with $a > 1$. With this, it follows, at the same speed of the machines:

$$D_{twin} = \sqrt[3]{6 \cdot a} \cdot D_{ring} \approx 1.8 \cdot D_{ring} \cdot \sqrt[3]{a} \quad (2.23)$$

As the value a will be only slightly above 1, the third root is almost 1. Example: Tests and throughputs with the smallest ring extruder of (presently) 19 mm can thus be compared with a twin-screw extruder of approx. 34 mm.

The extruder comparison with the result of Equation 2.23 was carried out with the conveying capacity of the screw geometry. Alternatively, it can also be “demanded” that both extruders shall have the same throughput density per shaft. From this results with Equation 2.18 and Equation 2.20 directly the connection Equation 2.23 without the factor $\sqrt[3]{a}$.

Following the above numerical examples of the maximal performance density, the throughput density is considered:

$$P_{D,Wmax} = 100 \frac{\text{Nm}}{\text{cm}^3} \quad e_{min} = 600 \frac{\text{kJ}}{\text{kg}} = 0.17 \frac{\text{kWh}}{\text{kg}}$$

For the maximal throughput it results in

$$\dot{M}_{Dmax} = \frac{100}{600} \cdot \frac{\text{kg}}{10^6 \cdot \text{mm}^3}$$

The number is not clear at first. The dimensionless throughput key figure

$$\dot{V}_B^* = \frac{\dot{M}_{Dmax}}{\frac{1\text{kg}}{\text{l}}} = \frac{100}{600} = 0.17$$

is without the reference density a known value [8] for the extruder experts.

Multiplication with a screw speed and the screw diameter cubed produces the maximal throughput. For $D = 50 \text{ mm}$ and $n = 1000/\text{min}$, the result is 1.25 t/h . For comparison, Figure 2.24 shows realized throughputs when compounding [18] PC with glass fibers for an extruder of the size 50 (more precisely 51.2 mm).

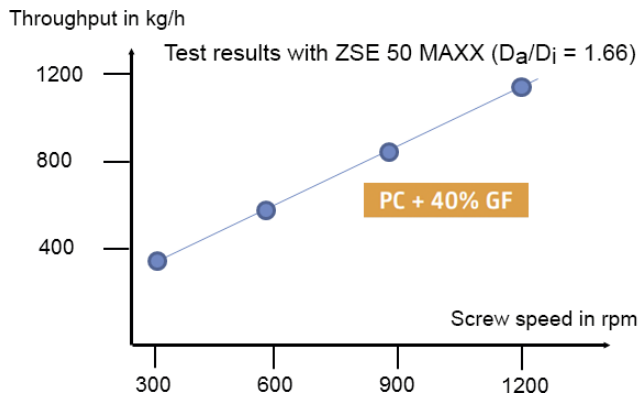


Figure 2.24 Measured throughputs with PC + 40% GF

The example is only conditionally comparable as with PC + GF a slightly different value for the enthalpy change arises. The magnitude of the specific heat capacity of PC + GF is about 2 kJ/kg at somewhat above 300°C . The value increases with increasing temperature, and decreases with increasing GF content. So, also in this example, about 600 kJ/kg (0.17 kW/kg) is needed for the product.

It should also be noted that even with the same enthalpy change real throughputs are below the maximum throughput of 1.25 t/h , firstly because the maximal torque is not used, and secondly because only the enthalpy of the polymer was taken into account at the specific drive performance for the example. In addition, when the housing is cooled, some of the energy produced by dissipation is not retained in

the product and the specific drive performance is higher and thus the maximal throughput is lower.

Already in the 1960s, highly productive extruders were expected to produce high specific drive performance of about 1000 kJ/kg (0.28 kWh/kg) (Mink [24, page 159]). According to the considerations of Lechner, Section 5.3, there are limits for the energy requirement of 0.15 to 0.25 kWh/kg for polymer bulk densities of 0.3 to 0.7 g/cm³ for compounding processes.

2.3.8 Performance Density in the Melt Area

As described above, most of the drive energy is needed to melt the polymer. This section specifically considers one melt area and asks, what is the influence of viscosity on the performance density? Some extruders, e.g. degassing extruders in polymer manufacture, are charged with melt, i.e. throughout the extruder there is a melt. The viscosity is then a mixed viscosity of polymer with solvents and additives.

For the melt area, a filled screw section is considered, and as a thought experiment a constant viscosity η . For this case, the “extruder equations” are known and described in detail in [8]. Regardless of the extruder size, the dimensionless performance for the considered screw section of length L is:

$$P^* = \frac{P}{\eta \cdot n^2 \cdot D^2 \cdot L} = B_2 \cdot \left(1 - \frac{\dot{V}^*}{B_1}\right) \quad (2.24)$$

Here, \dot{V}^* is the throughput key figure, Equation 2.12, B_1 and B_2 are so-called “profile parameters”, which only depend on the screw geometry. They are dimensionless and independent of the absolute extruder size. The initially asked question regarding the dependence on the viscosity can be seen from the above equation, but the connection with the torque on the performance density becomes even clearer:

$$P_D = \frac{P}{D^3 \cdot n} = \eta \cdot n \cdot \frac{L}{D} \cdot B_2 \cdot \left(1 - \frac{\dot{V}^*}{B_1}\right) = z \cdot 2 \cdot \pi \cdot \frac{M_{d1}}{D^3} \quad (2.25)$$

The performance density and the factor

$$\eta \cdot n \cdot \frac{L}{D} \cdot B_2 \sim \frac{M_{d1}}{D^3} \quad (2.26)$$

are therefore directly proportional to the torque. Consequently, in order to utilize fully an available torque, the viscosity, the screw speed, and the dimensionless length L/D are equivalent. In other words, if very high viscosities are present – e.g. in the melting area – then this is “at the expense” of a maximal extruder length. For special applications, extruder lengths of $L/D > 100$ are available.

According to the definition of the performance density, it is the performance of one extruder per revolution and related to the diameter and dimensioned. The performance profile parameter B_2 is dimensionless. This is discussed in more detail in Section 5.1.

2.3.9 Energy Balance and Product Discharge Temperature

Figure 2.25 shows an “extruder line”, the core of a compounding plant, consisting of an extruder with drive and downstream equipment (pelletizing, optional melt filtration, etc.).

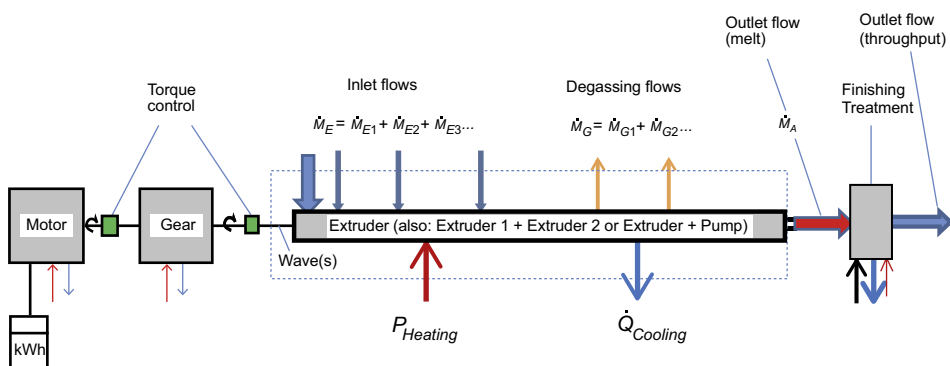


Figure 2.25 Extruder with drive and downstream equipment

For the extruder, an energy balance is set up in accordance with the dotted system limit shown in Figure 2.25. In terms of balance, these can also be two extruders connected in series. Alternatively, it may be one extruder with a downstream gear pump. When applying the energy balance given below, the process factors heating performance, cooling-heating flow, and drive performance must be applied analogously in accordance to the imaginary system limit. With the inclusion of an optional downstream gear pump, the performances of the extruder and the gear pump are to be used as sum under the drive performance. The balance can also be applied to the gear pump alone. In Section 7.4.2 it is applied to static mixers.

A stationary operation of the line is assumed and the first law of thermodynamics for open systems is applied. Above the audit space in Figure 2.25 the mass flows

are depicted which can be expressed together with the discharge flow by the enthalpy flows. The enthalpy flows are thermodynamic state variables in contrast to the heat flow, the drive performance, and the heating performance, which are process factors. State variables are “path-independent” and are described by their numerical values at the system boundary. The extruder can thus be well-balanced like a “black box”. The process factors pass the balance limit at the bottom and left in the figure.

The energy balance provides for the depicted system boundary:

$$\dot{M}_A \cdot \left(c_A \cdot \bar{T}_A + \frac{p_A}{\rho_A} \right) + \dot{Q}_{housing} + \dot{H}_{degassing} = P_W + P_{heating} + \sum_{i=1}^n \left(c_{Ei} \cdot \bar{T}_{Ei} + \frac{p_{Ei}}{\rho_{Ei}} \right) \dot{M}_{Ei} \quad (2.27)$$

Where:

- \dot{M}_A is the discharge mass flow (product flow).
- \bar{T}_A is the energetic mean product discharge temperature.
- c_A is the specific heat capacity at constant volume at the temperature \bar{T}_A . For polymers, this differs only very slightly from the specific heat capacity at constant pressure. The difference becomes greater at very high pressures and temperatures.
- ρ_A is the density of the discharge flow at the temperature \bar{T}_A .
- p_A is the discharge pressure of the product at the system boundary. This may be the pressure in front of the die, but also the pressure downstream of the die, depending on where the system boundary is set. The discharge temperature changes depending on the system boundary. An example can be found in [8, page 335 in the *Fundamentals* book].
- $\dot{Q}_{housing}$ is the heat flow delivered or received via the inner screw housing. The value is a process factor and the algebraic sign was chosen so that a delivered heat flow (cooling) is positive. Formally, the heat flow can be expressed as follows [8, page 330 in the *Fundamentals* book]:

$$\dot{Q}_{housing} = U_G \cdot \int_{l_1}^{l_2} \alpha(l) \cdot (\bar{T}(l) - \bar{T}_{housing\ wall}(l)) dl \quad (2.28)$$

U_G is the inner circumference of the housing. Since the course of the variables in the equation is generally unknown, the heat flow can be roughly determined by averaging:

$$\dot{Q}_{housing} = U_G \cdot (l_2 - l_1) \cdot \alpha_m \cdot (\bar{T}_m - \bar{T}_{housing\ wall,m}) \quad (2.29)$$

Index

Symbols

3DD mixer 345
3-zone screw 355
8to0 adapter 394

A

abrasion 132
abrasive processing behavior 160
ABS 793
additional materials 10
additive dosing 169
additives 10, 144, 155, 743
additives for recycling 155
advantages of the co-rotating twin-screw extruder 178
aeration bottom 668
aeration ring 118
aftercooling section 793
agglomerate separator 793
agglomeration 113
air pelletizing 135
aluminum bronze 740, 745
anisotropy 395
antioxidants 157
antistatic agents 145
apex zone 474
apparatus-based evaporation technology 103
apparent shear rate 771
arch 645
arching 629
armored flight 317

armoring 326
Arrhenius approach 22, 498
aspect ratio 160
automated batch plants 709
automation 126
auxiliary dosing 178
axial clearance 739
axial shaft seal 740
axi-symmetric 643

B

back pressure 357
back pressure zone 196
backward degassing, PRE 431
backwashable screen changers 762
Bagley correction 771
barrel configuration 298
barrel cooling 492
barrel temperature control 458
barrier flight 360
barrier screw 360
batch mixer 705
batchwise degassing 109
beads 280, 292
bearing
– of the screw shafts 342
bearing seizing 742
belt type dryer 799
bimetal 400
bimetal cylinders 318
black specks 163
blend
– polyblend 152

blender selection 675
 blend hopper 670
 blending pipe 671
 blending silos 662
 blowing agent 284, 797
 blow tank 726
 Bodenstein number 539
 bonding 704
 booster pump 733
 bore gage 399
 bridging 629
 bubble function 79
 bulk boiling 541
 bulk density 145, 263, 358, 637, 782
 bulk heat exchanger 119, 120
 bulk heat transfer 119
 bulk materials 629
 butadiene rubber 385

C

cable compound 463
 caking 113
 calcium carbonate 160, 743
 calcium carbonate (CaCO_3)
 – chalk 249
 calender 349, 465, 548
 calender speeds up to the winder 567
 calender types 559
 calibration 810
 calibration series 146
 candle filter 756
 capillary pressure transducers 813
 carbon 745
 carbon black 212, 381, 463, 743
 carbon dioxide balance 160
 carbon fibers 145
 cartridge heater 741
 cascade 57
 cascade arrangement 398
 cast iron rolls 566
 cavity transfer mixer 367
 cell density 281
 cell diameter 281
 cell expansion 289

cell growth 289
 cells 287
 cellulose 268
 centerline distance 370
 central spindle 405
 centrifugal dryer 796
 ceramic 745
 certification 139
 chamber conveying effect 400
 chemical nickel plating 328
 chill roll lines 576
 chopper 130
 chromium oxide coatings 332
 circulation 103
 circulation flow with static mixers 621
 cleaning 708, 709
 cleaning time 127
 clearance 355
 closed-loop system 721
 closely intermeshing, co-rotating
 twin-screw PRE 426
 coating
 – calcium carbonate 250
 – material 314
 coatings
 – wear protection 326
 coefficient of variation 589, 599, 701
 cohesionless 629
 co-kneader 345. *See also* continuous
 kneader
 cold pelletizing 781
 color 146
 colorants 146, 157
 color assessment 138
 color development 146
 color measurement 818
 color samples 147
 common bulk material densities
 – compounding 232
 compact heat exchanger 625
 Compact Processor 471
 comparison single-screw to twin-screw
 extruders 353
 compatibilizers 145, 152
 compensation zone 397

- competition between screen changer and large-area filter 778
 - composite material 265
 - compounding 9, 11, 17, 125, 263
 - main task 177
 - compounding challenges 25
 - compounding extruder 194
 - compounding with gear pumps 733
 - compound, thermoset 466
 - compression ratio 355
 - compression test 113
 - compression zone 358, 397
 - compressive strength 283, 639, 646
 - computational fluid dynamics (CFD) 776
 - concentration 599
 - concentration difference 71
 - conical co-rotating extruder 346
 - conical screw mixer 666
 - conical twin screw 398
 - conical twin-screw extruder 346
 - construction sizes, PRE 408
 - container mixer 709
 - continuous 665
 - continuous kneader 442
 - continuous mixer 505, 710
 - continuous operation 109
 - Continuous Processor (FCM) 347
 - continuous screen changer 761
 - control, model-predictive 828
 - control system 743
 - conveyance fluctuations 734
 - conveying and working principle, PRE 410
 - conveying behavior 355
 - conveying element 196, 298, 454, 590
 - conveying elements
 - free cut 260
 - conveying gas velocity 716
 - conveying performance 196
 - conveying zone 397
 - convolution integral
 - residence time distribution cascade 57
 - cooling air 792
 - cooling air pelletizer 792
 - cooling capacity on a production scale 44
 - cooling mixer 708
 - cooling rolls 568
 - cooling zone 295
 - Coperion 346
 - co-rotating twin-screw extruder 263, 346
 - advantages 178
 - disadvantages 180
 - corrosion 132, 313, 378
 - cost curve 350
 - counter-rotating twin screw 387
 - counter-rotating twin-screw extruders 347
 - counter-rotating twin screw, zones 396
 - coupling agents 145
 - CRD mixer 365
 - critical outlet diameter 629
 - crosslinking agent 463
 - cross mixing 53, 587
 - cross-mixing 373
 - cumulative frequency distribution of
 - maximum shear load 608
 - cutter head 790
 - cutting chamber 791
 - cutting circle diameter 790
 - cutting process 781
 - cutting unit 793
 - cylinder assembly 276
 - cylinder segments 372
 - cylinder wall temperature 811
- D**
- D_a/D_i developments and process sections 233
 - D_a/D_i ratio 198, 257. *See also* diameter ratio
 - Darcy's law 768
 - dead corners 165
 - dead zones 346, 655
 - decompression zone 363
 - decontamination 524
 - deficient lubrication 740

- degassing 108, 263, 277, 375, 470, 481, 492
- degassing and reaction module (ERMO), PRE 433
- degassing cylinder 437
- degassing drum 511
- degassing extruder 362
- degassing performance 512
- degassing, PRE 429
- degassing process 109
- degassing ring 436
- degassing silo 108
- degassing temperature 111
- degassing time 111
- degassing via a downstream single-screw PRE 435
- degassing zone 214, 303, 397, 510
- degree of automation 782
- degree of disaggregation 592
- degree of dispersion 212
- degree of filling 145
- degree of filling, PRE 411
- degree of freedom 482
- degree of pump efficiency 188
- degree of segregation 600
- demanding heat transfer tasks 624
- demetallization 129
- demixing of solids 167
- density 65, 300, 304
- density, foam 281
- depreciation 125
- design for flow 629
- design, modular 371
- devolatilization 63, 78, 541
- devolatilization number 73, 74, 76, 77, 78
- devolatilization task 69
- devolatilization zone 68, 214
- diameter ratio D_a/D_i 183
- die plate 790
- differential equation, ordinary 300
- differential pressure 738
- differential scanning calorimetry 823
- differential weigh feeder 18
- diffusion 110
- diffusion coefficient 69, 110
- dimensionless key figures
 - gas dispersion 620
- disadvantages of the co-rotating twin-screw extruder 180
- disc filter 758
- discharge aid 654
- discharge aids 629
- discharge devices 629, 654
- discharge system 461
- discharge zone 295
- discoloration
 - degree of 268
- discontinuous 665
- discontinuous compounding 178
- discontinuous processing
 - batch process 341
- disk mixer module 615
- dispersion 304, 591, 820, 824
- dispersion aid 213
- dispersion behavior 607
- dispersion quality 593, 820
- dispersion ring 276, 420
- dispersion zone 261
- dispersive mixing 374, 591
- dispersive mixing zone 212
- displacement flow 344
- displacement pump 731, 732
- dissipation performance 51
- distributive mixing zone 210
- dosage system 743
- dosing 255, 510, 731, 744
- dosing of solids 168
- dosing pump 743
- double helical gearing 737
- downpipe evaporator 96
- drag flow 178, 344
- drive energy extruder
 - specific 28
- droplet dispersion 595
- droplet separator 796
- dryblend 697, 703
- dry blends 155
- drying 129, 515, 786
- drying process 786
- dunes 717

dust content 782
dwell time range 395
dynamic mechanical analysis 823
Dynamic Mixing Ring 366

E

eccentric 630
economical compounding 244
economics 125
edge trims as waste product 558
effectiveness of extruder cooling 506
efficiency 303
efficiency of the cooling of the housing 43
EJK model 390
electrical heating
– extruder 42
electric power costs 125
elongational flow 374
elongational viscosity 295
elongation at break 823
emission 113
energetic mean product discharge temperature 41
energetic mean temperature 621
energetic mean temperature increase 619
energy 537
energy balance 300, 305, 492
energy certification 139
energy consumption 485
energy fluxes 68, 69
energy input 479
energy input, specific 150, 310
energy required for most compounding processes 0.15 and 0.25 kWh/kg 232
energy required for the deformation 283
energy requirement when compounding 28
energy saving 525
energy supply without wall 98
engineering thermoplastic 793
entrainer 100
entrainer dispersion 101

environmental protection 139
equilibrium relationship 65
equipment technology 142, 148
Erdmenger patents
– licensed since 1953 229
Erdmenger profile 273
erratic flow 631
error analysis 401
expanding forces 736
expansion flow 445
extensional flow 587
externally dosed 18, 171
extraction number 543
extruder 471
extruder barrels 133
extruder diameter 5 mm
– co-rotating 193
extruder key figure
– most important 172
extruder L/D > 100 193
extruder type 488
extruder types 341
extrusion line 354

F

falling-film devolatilizer 64
Farrel Continuous Mixer 470
fault sources scale-up 623
feed characteristic 588
feed cylinder with feed screw, PRE 423
Feed Enhancement Technology (FET)
– function principle 238
feeders 654
feeding 726
feeding process 387
feeding zone 295, 396
feed-limited 223
feed part 276
feed positions in compounding 21
feed section 473
feed section, PRE 423
feed zone 201, 300, 306, 356
fiber balls 266
fiber morphology 265

- fiber-optic sensor 440
 - fiber size distribution 265
 - fields of application PRE 404
 - filler 463, 796
 - filler addition and wetting 261
 - filler contents 145
 - filler load
 - up to 85% w/w 252
 - fillers 144, 159, 247
 - filling 130
 - filling degree 300, 304
 - filling level 536
 - film stretching lines 581
 - film take-off machine 582
 - film thicknesses
 - sheets 572
 - film unit 349
 - filter candles 755
 - filter discs 756
 - filter elements 755
 - filter housing 755
 - filter media 749
 - filter pressure test 824
 - filter system 755
 - filtration 747
 - flame retardant 145, 157, 463, 797
 - flank gap 398
 - flash evaporation 541
 - flat film dies 573
 - flax 265
 - flexible particles 749
 - flexible PVC 465
 - flight depth 355
 - Flory-Huggins theory 66
 - flowability 113, 392, 782
 - flow behavior 138
 - flow, creeping 586
 - flow factor 647
 - flow function 639, 648
 - flow patterns in laminar flow 586
 - flow power 300, 305
 - flow profile 641
 - flow properties 629, 637
 - flows of the kneading stock
 - calender 568
 - flow temperature range 27
 - fluid heating 741
 - fluidized bed 109, 667
 - fluid mixer 699, 706
 - fluorescence analysis 303
 - foam
 - chemical 284
 - physical 284
 - foam characterization 281
 - foam, closed-celled 282
 - foam density 281
 - foamed polymer 279
 - foam evaporator 101
 - foam extrusion 283
 - foaming agent 284
 - foam morphology 281
 - foam, open-celled 282
 - fogging 108
 - foodstuff 468
 - foreign dosing 59
 - formulation 142, 148
 - formulation components 392
 - formulation problem 401
 - Fourier number 621
 - fracture strain 391
 - free cut 398
 - frequency converter 171
 - friction 721
 - friction bearing 738, 745
 - friction-bearing cooling 734
 - from polymer to plastic 152
 - Froude 699
 - functional zones of extruders 177
 - funnel flow 635, 641, 643, 649
- G**
- “gaps” in the extruder housing 345
 - gas dispersion 620
 - gear mixing elements 132
 - gear pump 296, 572, 731
 - gear pump, mode of operation 732
 - gear pumps 345
 - gear wheels 736
 - gelation 388

- gels 767
- generalized scale-up 624
- geometrical quantities
 - twin-screw extruder 186
- glass fiber 299
- glass fibers 145, 797
- glass spheres 145
- grain sizes 743
- graphite packings 736
- gravimetric dosing 255
- gravity flow 663
- gravity flow blending 669
- gravity flow blending silo 671
- grooved barrel extruder 345, 356
- gusset area
 - screw-screw 166

H

- Hagen-Poiseuille 785
- hard material coatings 329
- heat capacity 300, 304
- heat flow 300, 305, 309
 - extruder housing 41
- heating 741, 745
- heating-cooling mixers 263
- heating duct 735, 741
- heat resistance 315
- heat stabilization 145
- heat stabilizers 156
- heat transfer 376
- heat transfer coefficient 785
- heat-transfer media 441
- heat transfer oil 741
- heavy series, PRE 410
- helical gearing 736
- Henry coefficient 66
- Henschel mixer 707
- herringbone gearing 737
- high-pressure capillary rheometer 816
- high-shear screw configuration 303
- high-speed mixer 699, 704, 706
- high-speed mixers 698, 702, 703
- high-speed steels 317
- high-viscosity reactor 88, 350, 508, 529
- high-viscosity technology 16
- high-viscous evaporation technique 91, 94
- homogeneous mixing 585
- homogenization 359
- hopper wall inclination 643, 649
- horizontal mixer 706
- hot die-face pelletizing 781
- hot-working steel 737
- hybrid spindle 416
- hydrodynamic lubrication film 738
- hydrolysis 515

I

- impact dryer 796
- impact-resistant modifier 391
- impact strength 823
- incipient failure 638
- incorporating fillers
 - extruder construction 244
- increasing throughput with FET
 - side feeder 240
- infrared spectroscopy 819
- infrared thermometer 812
- ingredients 144
- injection bolt 458
- injection molding machine 344
- injection point
 - side-stream addition 620
- injection ring 428
- injection tubes and injection valves, PRE 428
- injection zone 295
- inlet temperature 69
- instable zone 719
- insulation applications 279
- interaction parameter 66
- intermediate ring 420
- intermediate ring, PRE 419
- intermediate stop ring 421
- intermeshing region 178
- internal friction angle 639
- internal mixer 385
- internals 665

intrinsic throughput 197
 inventory control 633
 invert cone 671
 investment costs 490
 involute geometry 409
 involute toothing 733

J

jet mixer 667
 jute 265

K

Kenics mixer 611
 kinematic parameter of flow Λ 185, 197
 kinematic self-cleaning 179
 K-level 392
 kneader 442, 501
 kneader barrel 451
 kneader reactor 529
 kneader shaft 451
 kneader shaft temperature control 460
 kneading block 590
 – principle of operation 591
 kneading blocks 132, 272
 kneading bolt 456
 kneading element 298, 454
 kneading flight 444
 kneading hooks 529
 kneading pin 444
 kneading tooth 444, 456
 kneading zone 398
 Kolsterising 326

L

laboratory extruder 304
 laboratory rheometer 815
 laboratory three-roll mills 349
 laminar flow 611
 large-area filters 754
 LDPE 501
 leakage 735
 level control 634

level of expansion 281
 light microscopy 820
 lightweight applications 279
 limitation of the finish degassing 84
 loading cycle 592
 longitudinal mixing 53, 373
 loop evaporator 101
 lower explosion limit 110, 111
 lubricant 267
 lubricants 145
 lubrication bore relief 739, 743

M

machine-hour rates 125
 Maddock mixing section 365
 magnetic coupling 745
 maldistribution 98
 maleic anhydride 269
 manufacturing costs 125
 market availability and competition 179
 martensitic stainless steel 744
 mass density 66
 mass flow 68, 74, 109, 113, 629, 635, 641, 643, 665, 669
 mass flux 70
 mass fraction 65
 mass production 140
 mass transfer 373
 mass transfer coefficient 71
 mass transfer resistance 110
 masterbatch 159, 379, 487, 797
 material 378
 material conditions 69
 material data 300
 material handling 127
 materials
 – shaft D_a/D_i 183
 maximal performance density 34
 maximum power density 183
 maximum product volume in the extruder 188
 mean concentration 70
 mean residence time
 – measurement, inner geometry 58

- measurement technology 809
- measuring pigs 133
- mechanical blending silo 667
- melt channel 360
- melt compounding 12, 18
- melt distributor 790
- melt enthalpy 272
- melt exchange surface 512
- melt extruder 353, 361
- melt feed extruder 31
- melt feed extruders
 - hot feed extruder 31
- melt filter 256
- melt filtration
 - influencing factors in 765
- melt flow index 741
- melt flow ratio 815
- melting 131, 470
- melting zone 260, 272, 300, 307
- melt pool 359
- melt pressure 514
- melt pump 361
- melt pump, PRE 441
- melt temperature 291, 811
- melt viscosity 272
- metal fiber fleece 752
- metal wire mesh 750
- metering zone 344, 359, 397
- milling 129
- minerals 145
- mini impression roller 569
- minimum drive energy of an extruder 30
- minimum drive energy of extruders 30
- minimum fluidization 667
- minimum fluidization velocity 112
- minimum load 593
- minimum load time 212
- minimum pressure drop 717
- minimum residence time 56, 57
- minimum shear stress 212
- mis-distribution 98
- mixed friction range 738
- mixer 366, 471, 472
- mixer body segment 481
- mixer evaluation
 - specific effect 616
- mixer SMX Plus 614
- mixer, static 295
- mixing 585
- mixing and dispersion 585
- mixing, axial 450
- mixing dam 481
- mixing, dispersive 210, 445, 470, 591
- mixing, distributive 210, 445, 470
- mixing effect 373
- mixing element 298
- mixing elements 178, 364
- mixing elements for incorporating glass fibers 236
- mixing, homogeneous 585
- mixing-in of additives into the melt 621
- mixing-in of small amounts 612
- mixing intensity 479
- mixing order 130
- mixing performance 49, 51, 211
- mixing performance and mixing quality 51
- mixing performance of a static mixer 50
- mixing power 493
- mixing processes during color change 603
- mixing quality 174, 364, 493, 598
- mixing quality and mixing performance 52
- mixing quality and sample size 623
- mixing screw 667
- mixing section 473
- mixing time 130
- mixing tool 130, 699, 704, 706
- mixing zone 209, 285, 295, 303, 307
- mixture of solids 364
- modular design 178
- modular system 450
- modular system, PRE 422
- Mohr stress circle 639
- moisture 795
- moisture content 518
 - chalk 251

monomer 541
 monomer removal 521
 monomer to the plastic 11
 Mooney 741
 most important throughput limits, torque
 and volume 231
 moving bed 719
 MRS extruder 510
 multi-chamber blending silo 675
 multifunctional
 – co-rotating twin-screw extruder 178
 multi-layer extrusion 574
 multi-process elements 273
 Multi-Rotations System (MRS) 510
 multi-screw extruders 348
 multi-stage 362
 MVR 137

N

nap spindle 276, 414
 natural fibers 263, 797
 Nauta mixer 666
 neural network 828
 Newtonian fluid 741
 Newtonian law of friction 769
 Newton number 537
 NIC cylinders
 – at JSW extruders 346
 nickel–silver alloy 740, 745
 NIR 303
 nitrided 737
 nitrided steel 737
 nitriding 320
 no-arching criterion 647
 non-intermeshing extruder 387
 non-intermeshing screw geometry 347
 non-screw extruders 349
 notched impact strength 391
 notching point 738
 nucleating agent 284
 nucleation 287

O

odor 113
 offer profile 489
 oligomer 541
 online measurement 295
 online process control 138
 online viscometer VIS 514
 operating costs 490
 operating principles of different kneading
 blocks 242
 operating variables 478
 optimum D_a/D_i ratio 192
 order planning 127
 oscillating screw kneader 442
 outlet temperature 69, 308
 oven test 114
 oversized particles 787

P

PA6 30
 packaging 128
 packaging types 136
 parameters D_a/D_i 183
 partial flows 587, 590
 partial flow sections in a twin-screw
 extruder 590
 partial pressure 65
 particle cloud 716
 particle foam 280
 particle size 110, 630
 particle size distribution 630, 632
 particle tracking 604
 PC + GF 38
 PC, polycarbonate 24
 Péclet number 78
 pellet degassing 109
 pelletizing 135, 781
 pelletizing head housing 790
 pelletizing system 781
 performance density 32
 performance density in the melt 39
 permeability 768
 personnel costs 125
 PET 380, 793

- PET processing 515
- phase boundary interface 542
- phase interface coordinate 78
- physical mixtures 152
- PID controller 743
- pigments 144, 743
- pilot plant 113, 114
- pin extruder 345
- pin type extruder 33
- pipe 387
- pipe forces 717
- pipng 630
- piston screen changer 760
- pitch 355
- pitting corrosion 324
- PLA 523
- planetary feed cylinder 276, 424
- planetary roller extruder 264, 348, 404, 507
- planetary roller extruder, designation 408
- planetary spindle configuration 412
- planetary spindle lengths 416
- planetary spindles 405
- plasma nitriding process 322
- plasma-sprayed screw 400
- plastic 11
- plasticizers 156
- plasticizers for PVC 155
- plasticizing 359
- plasticizing extruder 353, 356
- plasticizing zone 295
- plastic processing 344
- plastification zone 204, 272
- plug conveying 717, 719, 721
- PMMA 793
- pneumatic blending 668
- pneumatic conveying 714
- pneumatic conveying system 720
- polishing rolls 577
- polyamide 299, 793
- polyamide 6 521
- polyblend 152
- polycarbonate 304, 793
- polycondensation 85, 86, 541
- polymer 11
- polymer blend 15, 152, 379
- polymer development 140
- polymer, foamed 279
- polymerization 541
- polymer melt 742
- polymer processing 9
- polyolefin 267, 304, 379, 463, 487, 788
- polypropylene 818
- polyreactions 14
- polystyrene 793
- polystyrenic 487
- porosity 749
- porosity ε 637
- powder coating 466
- powder degassing 109
- powdered plastics 387
- powder injection molding 704
- powder mechanics 113
- powder mixer 130
- power consumption 199
- power density 182, 494
- power parameter B2 188
- power performance 196
- pre-drying 129
- pre-heating zone 396
- premix 129
- premixing of solid matter 20
- pressure 300, 304
- pressure and power characteristics of extruders 186
- pressure build-up 296, 359, 492
- pressure build-up capacity 197, 352
- pressure build-up efficiency 303, 308
- pressure build-up system 461
- pressure build-up zone 196, 216, 303, 307
- pressure drop 113, 718
- pressure drop minimum 719
- pressure loss multiple
 - pressure loss compared to empty pipe 611
- pressure measurement technology 813
- pressure peak 657
- pressures in silos 656
- pressure throughput control 346
- pressure transducers, piezoresistive 814

pressurization 486
 principle of a planetary roller extruder 405
 processing 11
 – term 11
 processing length 392
 processing line 471
 processing of plastics 349
 processing zone 194
 process parameter control 514
 process parameters 143
 process rheometer 817
 process technology 142, 148
 process volume 529
 process water 791
 process zone 371
 product changes 126
 product change time 374
 product development types 141
 production costs 125, 490
 production history 149
 production of polymer blends 152
 product outlet temperature 492
 product portfolio 127
 product quality 134
 product requirements 140
 product sensitivity 499
 product transport 536
 profile parameter A1 185
 profile parameters 39
 propellant 284
 pulsation behavior 737
 pulsation-free 737
 pulsations 736
 pump design 734
 pump efficiency 47, 166
 pumping capacity 180
 pumping efficiency 218, 296, 344
 pumping performance 51
 pumping screw 473
 pumping zone 397
 pump performance 51
 purge bin 108
 purity 820
 pushrod pressure transducers 813

PVC 26, 463, 465, 487, 505, 792
 PVC compounding 390
 PVC dryblend 387
 PVC grain 389
 PVC powder mixture 387
 PVC processing 703
 PVD coating 332

Q

quality control 137, 149
 quality requirements 125, 138
 quality standards 139

R

radial mixing behavior 539
 radical chain terminators 158
 radical scavengers 155
 RAM extrusion 387
 random mixing 702
 range of performance of extruders 32
 ratholing 630
 reactive extrusion 379
 recirculation 665
 recommendations for application
 – coatings 336
 recompounding 13
 recyclates 158
 recycling 82, 108, 303, 380, 466, 519, 662
 recycling quota 139
 reference throughput key figure
 – of extruders 35
 reference value
 – diameter, center distance 182
 reinforcement 265
 reinforcement materials 161
 representative shear rate 770
 requirement profile 489
 requirements for compounding 125
 residence time 85, 109, 300, 305, 374,
 448, 479, 498, 530, 634, 774
 residence time behavior 538, 606
 residence time characteristic 225
 residence time cumulative curve 54

- residence time density 189
 - residence time distribution 56, 225, 448, 663
 - residence times in the gas space 86
 - residence time spectrum 267, 374
 - residual content 108
 - residual moisture 268, 795
 - resistance thermometers 811
 - restriction ring 455
 - revenues 350
 - reverse conveying elements 273
 - Reynolds number 74, 537
 - rheology 815
 - ribbon blender 706
 - rigidity of plastic products 160
 - rigid PVC 465
 - ring disk reactor
 - disk reactor 88
 - ring extruder 37, 505
 - RingExtruder 348, 369
 - risk of entrainment
 - back pressure 166
 - roller cylinder 405
 - roller extruder 349
 - roller gap 398
 - roll mill 556
 - rotary screen changers 763
 - rotary valve 726
 - rotor 529
 - rotor orientation 475
 - rotor wing 473
 - rubber compound 379, 381
 - rubber extruder 33
- S**
- safety shutdown 743
 - sample 599
 - scale dissimilar 174
 - scale-down 172, 298
 - scale-up 150, 298, 378, 545
 - "numbering-up" 623
 - scale-up and scale-down-considerations 36
 - scale-up by scaling the dimensions 622
 - scale-up exponent 172
 - scale-up method 623
 - scale-up static mixers 622
 - scanning electron microscopy 820
 - Schmidt number 74
 - screen pack 826
 - screw, backward conveying 197, 199
 - screw configuration 219, 298, 371
 - screw, conveying 197, 199
 - screw cross sectional area 43
 - screw design 260, 395
 - screw element 196, 447
 - screw machines 65
 - screw, overrun 197, 199
 - screw speed 234
 - S-curve 97
 - sealing line 736
 - sealing point 736
 - secondary air 720, 724
 - segregation 131, 631, 662, 668, 699, 702, 703
 - self-cleaning 373, 529
 - self-regulating backing-up length 106
 - semi-finished product 353
 - sensor system, PRE 438
 - sensor, virtual 828
 - settling velocity 716
 - setup and mode of operation of a calender 564
 - set-up time 127
 - shaft-hub connections 230
 - shaft power 300, 305, 309
 - shear cell 639
 - shear effects 131
 - shear flow 374, 587
 - shear flow and extensional flow in extruders 597
 - shearing 741
 - shear load 607
 - shear rate 446, 479, 596
 - shear stress 212, 637
 - shear test 113
 - shear tester 637
 - shear torpedo 365
 - shear viscosity 295

- shear zone 397
- sheet pelletizer 804
- Sherwood number 71
- side degassing 268
- side feeder 276
- side feeder, PRE 417
- side feeders 258
- silica 381
- silicone oil 538
- silo problems 634
- silo screw mixer 666
- similarity, geometrical 379
- single flight screw elements 166
- single-screw extruder 351, 500
- single-screw extruders 344
- sinter 317
- slice element 656
- slow-motion 719
- smooth barrel extruder 356
- smoothed particle hydrodynamics 608
- SMX mixer 611
- snake tube evaporator 94
- solidifying 290
- solid particle in a shear flow 592
- solids channel 360
- solids conveying zone 201
- solid-state friction 739
- solid-state polycondensation 121
- solids-to-air ratio 715, 719
- species transport equation 604
- specific amount of energy at extruders 42
- specification limit 24
- specific drive energy 401
- specific drive performance 44
- specific energy 491
- specific energy input 222, 310
- specific energy of the input flows 28
- specific enthalpy 29
- specific heat capacity 28
- specks 571
- spectrophotometer 439
- SPH 608
- spheroidal compound rolls 566
- spinning pump 731
- spiral conveyor 135, 787
- spiral shear part 365
- spiral tube evaporator 94
- spot checks 137
- spray ring 427
- spreading force 377, 399
- spur gearing 736
- stabilizers 156
- stagnant zone 633
- standard spindle 414
- state diagram 717
- state of mixing 698
- state of stress 637
- state variables
 - process factors 41
- static mixer 101, 295, 609
 - adjustable 621
 - advantages 610
 - applications 609
 - construction types 611
 - demands on 610
 - disadvantages 610
 - drilled 615
 - focal points 609
 - heat transfer 621
 - limitation of use of 614
 - mean product residence time 617
 - reduction in layer thickness 617
 - scale-up-method with the exponent x 616
 - with internal temperature control 624
- static mixers 46
 - pressure loss multiple z of the empty pipe 616
- steam 741
- steam stripping 99
- stirred-tank reactors 529
- stochastic homogeneity 702
- stop ring PRE 406
- storage time 645
- strainer 556
- strand conveying 716
- strand conveyor belt 803
- strand extrusion 291
- strand extrusion die 783

strand feeding 562
 strand pelletizer 135, 783
 strand pelletizing 783, 801
 strand suction air knife 783
 strength consideration
 – shaft D_a/D_i 183
 strength of a material
 – hardness 314
 stress-strain diagram 283
 stripping agent 215
 stripping agent dispersion zone 214
 stroke movement, axial 445
 structural design of silos 629
 structural silo design 645
 structural viscosity 622
 structural viscous behavior 741
 stuffing box 735, 740
 stuffing devices, PRE 417
 stuffing screw 165
 suction conveying 715
 suction scales 727
 Sulzer mixing reactor SMR 624
 supercritical gases 100
 surface chemistry 338
 surface layer hardening 319
 surface layer heat treatment 314
 surface load 774
 surface-volume ratio
 – twin-screw 189
 surface/volume ratio 151, 375, 377
 suspension process 389
 sustainability 139

T

talc 160
 tandem extrusion 293
 task of the calender 562
 tasks of the processing 14
 temperature 300, 304, 811
 temperature, average 498
 temperature control 458, 512, 741
 temperature-control unit, PRE 440
 temperature curve 783
 temperature difference 785
 temperature increase 131
 – extruder 620
 – static mixer 620
 temperature increase by shearing 166
 temperature measurement 457
 temperature peak 498
 temperature sensor 741
 tempering
 – materials 313
 tensile test 137, 823
 test method 149
 thermal conductivity 300, 304
 thermal conductivity of the melt 160
 thermal damage of product, limit 22
 thermal diffusivity 785
 thermal temperature-time load 164
 thermochromism 819
 thermocouples 811
 thermogravimetric analysis 823
 thermoplastic 265
 thermoplastic portion 13
 thermoplastics 12
 thickness measuring 570
 threaded shaft seal 735, 740
 three-dimensional calculations of
 mixing and residence time behavior 602
 throughput capacity 510
 throughput density 35, 493
 – per shaft, equal 37
 throughput density per screw 36
 throughput key figure 35
 thrust edge element 272
 time consolidation 640, 653
 time flow function 653
 titanium dioxide 743
 toner 466
 toothed disc 366
 toothed intermediate ring 421
 torque density 32, 181, 230, 494
 torque factor 401
 torque limitation 223
 torque-limited process 181
 torque measurement 371
 torques of shaft and gearing 172

total failure
 – tube bundle heat exchanger 96
 total pressure loss 772
 TPE 463
 TPU film line 581
 trace-devolatilization 542
 tracer 303, 449
 Transfermix 345
 transfer systems 128
 transition element 454
 transmission electron microscopy 820
 transport and drying spindle 277
 transport process 196
 transversal mixing planetary spindle 415
 tribological properties 399
 TT spindle 415
 tube bundle heat exchanger 93
 turbine point 199
 twin rotor mixer 470
 twin-screw extruder 194
 twin-screw extruder, co-rotating 503
 twin-screw extruder, counter-rotating 504
 types of stress comminution of solid matter 20

U

ultrasonic measurement technology 828
 underwater granulation 135
 underwater granulation unit 276
 underwater pelletizing 784, 798
 underwater strand pelletizing 784, 793
 unique selling point 142, 148
 universal mixer 130
 unstable zone 717
 UV detector 303

V

vacuum chamber 435
 vacuum conveying 715
 vacuum degassing 278
 vacuum dome 268
 vapor pressure 65
 variance 700

velocity profile parabola and piston profile 622
 venting
 – forward vs. backward 259
 vent opening 215
 vent stuffer 215
 viscosity 137, 300, 304, 741
 volatile component 108
 volume flow number 76, 77
 volume fraction 65
 volume limitation 253
 volume-limited process 181

W

wall friction angle 640
 water absorption 794
 water ring pelletizer 805
 water slide 135
 wear 131, 313, 377, 477, 791
 wear limit 135
 wear liner 313
 wear liners 318
 wear, PRE 409
 wear protection 277
 Weber number 594
 Weber number for breaking up droplets 595
 welding 292
 wettability 145
 winder 571
 wire mesh laminate 751
 WLF equation 771
 wood flour 797
 wood-plastic compounds 698, 704

Y

Yellonex-Index 24
 yield locus 638

Z

zero-pellet-loss 139
 zone spindle 416